

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain.. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box	LOW		RATE CHART KG. PER HA.												
Weight per litre			0.70												
			Figures in body of chart = mm of door opening												
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate															
20			26	30	34	38	43	47	51	55	60	64	68	73	77
30	26	32	38	45	51	58	64	70	77	83	90	96	102	109	115
40	34	43	51	60	68	77	85	94	102	111	120	128	137	145	154
50	43	53	64	75	85	96	107	117	128	139	149	160	171	181	192
60	51	64	77	90	102	115	128	141	154	166	179	192	205	218	231
70	60	75	90	105	120	134	149	164	179	194	209	224	239	254	269
80	68	85	102	120	137	154	171	188	205	222	239	256	273	290	307
90	77	96	115	134	154	173	192	211	231	250	269	288	307		
100	85	107	128	149	171	192	213	235	256	277	299				
110	94	117	141	164	188	211	235	258	282	305					
120	102	128	154	179	205	231	256	282	307						
130	111	139	166	194	222	250	277	305							
140	120	149	179	209	239	269	299								
150	128	160	192	224	256	288									
160	137	171	205	239	273	307									
170	145	181	218	254	290										
180	154	192	231	269	307										
190	162	203	243	284											
200	171	213	256	299											
210	179	224	269												
220	188	235	282												
230	196	245	295												
240	205	256	307												
250	213	267													
260	222	277													
270	231	288													
280	239	299													
290	248	309													
300	256														
320	273														
340	290														
360	307														
380															
400															
425															
450															
475															
500															
525															
550															
575															
600															

Gear Box	LOW		RATE CHART KG. PER HA.												
Weight per litre			0.75												
			Figures in body of chart = mm of door opening												
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate															
20									28	32	36	40	44	48	52
30		30	36	42	48	54	60	66	72	78	84	90	96	102	108
40	32	40	48	56	64	72	80	88	96	104	112	120	127	135	143
50	40	50	60	70	80	90	100	110	120	129	139	149	159	169	179
60	48	60	72	84	96	108	120	131	143	155	167	179	191	203	215
70	56	70	84	98	112	125	139	153	167	181	195	209	223	237	251
80	64	80	96	112	127	143	159	175	191	207	223	239	255	271	287
90	72	90	108	125	143	161	179	197	215	233	251	269	287	305	
100	80	100	120	139	159	179	199	219	239	259	279	299			
110	88	110	131	153	175	197	219	241	263	285	307				
120	96	120	143	167	191	215	239	263	287						
130	104	129	155	181	207	233	259	285							
140	112	139	167	195	223	251	279	307							
150	120	149	179	209	239	269	299								
160	127	159	191	223	255	287									
170	135	169	203	237	271	305									
180	143	179	215	251	287										
190	151	189	227	265	303										
200	159	199	239	279											
210	167	209	251	293											
220	175	219	263	307											
230	183	229	275												
240	191	239	287												
250	199	249	299												
260	207	259													
270	215	269													
280	223	279													
290	231	289													
300	239	299													
320	255														
340	271														
360	287														
380	303														
400															
425															
450															
475															
500															
525															
550															
575															
600															

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain.. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box		RATE CHART KG. PER HA.														GB005
Weight per litre		0.80														
		Figures in body of chart = mm of door opening														
Width		8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate																
20					26	30	34	37	41	45	49	52	56	60	63	67
30		28	34	39	45	50	56	62	67	73	78	84	90	95	101	
40	30	37	45	52	60	67	75	82	90	97	105	112	120	127	134	
50	37	47	56	65	75	84	93	103	112	121	131	140	149	159	168	
60	45	56	67	78	90	101	112	123	134	146	157	168	179	190	202	
70	52	65	78	92	105	118	131	144	157	170	183	196	209	222	235	
80	60	75	90	105	120	134	149	164	179	194	209	224	239	254	269	
90	67	84	101	118	134	151	168	185	202	218	235	252	269	286	303	
100	75	93	112	131	149	168	187	205	224	243	261	280	299			
110	82	103	123	144	164	185	205	226	247	267	288	308				
120	90	112	134	157	179	202	224	247	269	291						
130	97	121	146	170	194	218	243	267	291							
140	105	131	157	183	209	235	261	288								
150	112	140	168	196	224	252	280	308								
160	120	149	179	209	239	269	299									
170	127	159	190	222	254	286										
180	134	168	202	235	269	303										
190	142	177	213	248	284											
200	149	187	224	261	299											
210	157	196	235	275												
220	164	205	247	288												
230	172	215	258	301												
240	179	224	269													
250	187	233	280													
260	194	243	291													
270	202	252	303													
280	209	261														
290	217	271														
300	224	280														
320	239	299														
340	254															
360	269															
380	284															
400	299															
425																
450																
475																
500																
525																
550																
575																
600																

Gear Box		RATE CHART KG. PER HA.														GB005
Weight per litre		0.90														
		Figures in body of chart = mm of door opening														
Width		8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate																
20										27	30	33	37	40	43	46
30				30	35	40	45	50	55	60	65	70	75	80	85	90
40	27	33	40	46	53	60	66	73	80	86	93	100	106	113	120	
50	33	41	50	58	66	75	83	91	100	108	116	124	133	141	149	
60	40	50	60	70	80	90	100	110	120	129	139	149	159	169	179	
70	46	58	70	81	93	105	116	128	139	151	163	174	186	198	209	
80	53	66	80	93	106	120	133	146	159	173	186	199	212	226	239	
90	60	75	90	105	120	134	149	164	179	194	209	224	239	254	269	
100	66	83	100	116	133	149	166	183	199	216	232	249	266	282	299	
110	73	91	110	128	146	164	183	201	219	237	256	274	292			
120	80	100	120	139	159	179	199	219	239	259	279	299				
130	86	108	129	151	173	194	216	237	259	281	302					
140	93	116	139	163	186	209	232	256	279	302						
150	100	124	149	174	199	224	249	274	299							
160	106	133	159	186	212	239	266	292								
170	113	141	169	198	226	254	282									
180	120	149	179	209	239	269	299									
190	126	158	189	221	252	284										
200	133	166	199	232	266	299										
210	139	174	209	244	279											
220	146	183	219	256	292											
230	153	191	229	267	305											
240	159	199	239	279												
250	166	207	249	291												
260	173	216	259	302												
270	179	224	269													
280	186	232	279													
290	193	241	289													
300	199	249	299													
320	212	266														
340	226	282														
360	239	299														
380	252															
400	266															
425	282															
450	299															
475																
500																
525																
550																
575																
600																

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box	RATE CHART KG. PER HA.														GB005
Weight per litre	1.00														Figures in body of chart = mm of door opening
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate															
20						27	30	33	36	39	42	45	48	51	54
30			27	31	36	40	45	49	54	58	63	67	72	76	81
40		30	36	42	48	54	60	66	72	78	84	90	96	102	108
50	30	37	45	52	60	67	75	82	90	97	105	112	120	127	134
60	36	45	54	63	72	81	90	99	108	117	125	134	143	152	161
70	42	52	63	73	84	94	105	115	125	136	146	157	167	178	188
80	48	60	72	84	96	108	120	131	143	155	167	179	191	203	215
90	54	67	81	94	108	121	134	148	161	175	188	202	215	229	242
100	60	75	90	105	120	134	149	164	179	194	209	224	239	254	269
110	66	82	99	115	131	148	164	181	197	214	230	247	263	279	296
120	72	90	108	125	143	161	179	197	215	233	251	269	287	305	
130	78	97	117	136	155	175	194	214	233	252	272	291			
140	84	105	125	146	167	188	209	230	251	272	293				
150	90	112	134	157	179	202	224	247	269	291					
160	96	120	143	167	191	215	239	263	287						
170	102	127	152	178	203	229	254	279	305						
180	108	134	161	188	215	242	269	296							
190	114	142	170	199	227	255	284								
200	120	149	179	209	239	269	299								
210	125	157	188	220	251	282									
220	131	164	197	230	263	296									
230	137	172	206	241	275	309									
240	143	179	215	251	287										
250	149	187	224	261	299										
260	155	194	233	272											
270	161	202	242	282											
280	167	209	251	293											
290	173	217	260	303											
300	179	224	269												
320	191	239	287												
340	203	254	305												
360	215	269													
380	227	284													
400	239	299													
425	254														
450	269														
475	284														
500	299														
525															
550															
575															
600															

Gear Box	RATE CHART KG. PER HA.														GB005
Weight per litre	1.10														Figures in body of chart = mm of door opening
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate															
20							27	30	33	35	38	41	43	46	49
30				29	33	37	41	45	49	53	57	61	65	69	73
40		27	33	38	43	49	54	60	65	71	76	81	87	92	98
50	27	34	41	48	54	61	68	75	81	88	95	102	109	115	122
60	33	41	49	57	65	73	81	90	98	106	114	122	130	139	147
70	38	48	57	67	76	86	95	105	114	124	133	143	152	162	171
80	43	54	65	76	87	98	109	120	130	141	152	163	174	185	196
90	49	61	73	86	98	110	122	134	147	159	171	183	196	208	220
100	54	68	81	95	109	122	136	149	163	177	190	204	217	231	244
110	60	75	90	105	120	134	149	164	179	194	209	224	239	254	269
120	65	81	98	114	130	147	163	179	196	212	228	244	261	277	293
130	71	88	106	124	141	159	177	194	212	230	247	265	283	300	
140	76	95	114	133	152	171	190	209	228	247	266	285	304		
150	81	102	122	143	163	183	204	224	244	265	285	306			
160	87	109	130	152	174	196	217	239	261	283	304				
170	92	115	139	162	185	208	231	254	277	300					
180	98	122	147	171	196	220	244	269	293						
190	103	129	155	181	206	232	258	284	310						
200	109	136	163	190	217	244	272	299							
210	114	143	171	200	228	257	285								
220	120	149	179	209	239	269	299								
230	125	156	187	219	250	281									
240	130	163	196	228	261	293									
250	136	170	204	238	272	306									
260	141	177	212	247	283										
270	147	183	220	257	293										
280	152	190	228	266	304										
290	158	197	236	276											
300	163	204	244	285											
320	174	217	261	304											
340	185	231	277												
360	196	244	293												
380	206	258	310												
400	217	272													
425	231	289													
450	244	306													
475	258														
500	272														
525	285														
550	299														
575															
600															



For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.



For Use with [TRANSPREAD](#) Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box Medium		RATE CHART KG. PER HA.														GB005	
Weight per litre		0.70														0.70	Figures in body of chart = mm of door opening
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	Rate	
20									25	27	30	32	34	36	39	41	
30					27	31	34	38	41	44	48	51	55	58	61	61	
40			27	32	36	41	46	50	55	59	64	68	73	77	82	82	
50		28	34	40	46	51	57	63	68	74	80	85	91	97	102	102	
60	27	34	41	48	55	61	68	75	82	89	96	102	109	116	123	123	
70	32	40	48	56	64	72	80	88	96	104	112	120	127	135	143	143	
80	36	46	55	64	73	82	91	100	109	118	127	137	146	155	164	164	
90	41	51	61	72	82	92	102	113	123	133	143	154	164	174	184	184	
100	46	57	68	80	91	102	114	125	137	148	159	171	182	194	205	205	
110	50	63	75	88	100	113	125	138	150	163	175	188	200	213	225	225	
120	55	68	82	96	109	123	137	150	164	178	191	205	219	232	246	246	
130	59	74	89	104	118	133	148	163	178	192	207	222	237	252	266	266	
140	64	80	96	112	127	143	159	175	191	207	223	239	255	271	287	287	
150	68	85	102	120	137	154	171	188	205	222	239	256	273	290	307	307	
160	73	91	109	127	146	164	182	200	219	237	255	273	291	310			
170	77	97	116	135	155	174	194	213	232	252	271	290	310				
180	82	102	123	143	164	184	205	225	246	266	287	307					
190	87	108	130	151	173	195	216	238	260	281	303						
200	91	114	137	159	182	205	228	250	273	296							
210	96	120	143	167	191	215	239	263	287								
220	100	125	150	175	200	225	250	275	301								
230	105	131	157	183	209	236	262	288									
240	109	137	164	191	219	246	273	301									
250	114	142	171	199	228	256	285										
260	118	148	178	207	237	266	296										
270	123	154	184	215	246	277	307										
280	127	159	191	223	255	287											
290	132	165	198	231	264	297											
300	137	171	205	239	273	307											
320	146	182	219	255	291												
340	155	194	232	271	310												
360	164	205	246	287													
380	173	216	260	303													
400	182	228	273														
425	194	242	290														
450	205	256	307														
475	216	270															
500	228	285															
525	239	299															
550	250																
575	262																
600	273																

Gear Box Medium		RATE CHART KG. PER HA.														GB005	
Weight per litre		0.75														0.75	Figures in body of chart = mm of door opening
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	Rate	
20																	
30																	
40			25	30	34	38	42	47	51	55	59	64	68	72			
50		27	32	37	42	48	53	58	64	69	74	80	85	90			
60	25	32	38	45	51	57	64	70	76	83	89	96	102	108			
70	30	37	45	52	59	67	74	82	89	97	104	112	119	126			
80	34	42	51	59	68	76	85	93	102	110	119	127	136	144			
90	38	48	57	67	76	86	96	105	115	124	134	143	153	163			
100	42	53	64	74	85	96	106	117	127	138	149	159	170	181			
110	47	58	70	82	93	105	117	129	140	152	164	175	187	199			
120	51	64	76	89	102	115	127	140	153	166	178	191	204	217			
130	55	69	83	97	110	124	138	152	166	180	193	207	221	235			
140	59	74	89	104	119	134	149	164	178	193	208	223	238	253			
150	64	80	96	112	127	143	159	175	191	207	223	239	255	271			
160	68	85	102	119	136	153	170	187	204	221	238	255	272	289			
170	72	90	108	126	144	163	181	199	217	235	253	271	289	307			
180	76	96	115	134	153	172	191	210	229	249	268	287	306				
190	81	101	121	141	161	182	202	222	242	262	283	303					
200	85	106	127	149	170	191	212	234	255	276	297						
210	89	112	134	156	178	201	223	245	268	290							
220	93	117	140	164	187	210	234	257	280	304							
230	98	122	147	171	195	220	244	269	293								
240	102	127	153	178	204	229	255	280	306								
250	106	133	159	186	212	239	266	292									
260	110	138	166	193	221	249	276	304									
270	115	143	172	201	229	258	287										
280	119	149	178	208	238	268	297										
290	123	154	185	216	246	277	308										
300	127	159	191	223	255	287											
320	136	170	204	238	272	306											
340	144	181	217	253	289												
360	153	191	229	268	306												
380	161	202	242	283													
400	170	212	255	297													
425	181	226	271														
450	191	239	287														
475	202	252	303														
500	212	266															
525	223	279															
550	234	292															
575	244	305															
600	255																



For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box		Medium RATE CHART KG. PER H.														GB005
Weight per litre		1.00														Figures in body of chart = mm of door opening
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	
Rate																
20													25	27	29	
30								26	29	31	33	36	38	41	43	
40					25	29	32	35	38	41	45	48	51	54	57	
50				28	33	38	43	48	53	57	62	67	72	76	81	
60		29	33	39	45	50	56	61	67	73	78	84	89	95	100	
70	25	32	38	45	51	57	64	70	76	83	89	96	102	108	115	
80	29	36	43	50	57	65	72	79	86	93	100	108	115	122	129	
90	32	40	48	56	64	72	80	88	96	104	112	120	127	135	143	
100	35	44	53	61	70	79	88	96	105	114	123	131	140	149	158	
110	38	48	57	67	76	86	96	105	115	124	134	143	153	163	172	
120	41	52	62	73	83	93	104	114	124	135	145	155	166	176	186	
130	45	56	67	78	89	100	112	123	134	145	156	167	178	190	201	
140	48	60	72	84	96	108	120	131	143	155	167	179	191	203	215	
150	51	64	76	89	102	115	127	140	153	166	178	191	204	217	229	
160	54	68	81	95	108	122	135	149	163	176	190	203	217	230	244	
170	57	72	86	100	115	129	143	158	172	186	201	215	229	244	258	
180	61	76	91	106	121	136	151	167	182	197	212	227	242	257	273	
190	64	80	96	112	127	143	159	175	191	207	223	239	255	271	287	
200	67	84	100	117	134	151	167	184	201	218	234	251	268	284	301	
210	70	88	105	123	140	158	175	193	210	228	245	263	280	298		
220	73	92	110	128	147	165	183	202	220	238	257	275	293			
230	76	96	115	134	153	172	191	210	229	249	268	287	306			
240	80	100	120	139	159	179	199	219	239	259	279	299				
250	83	104	124	145	166	186	207	228	249	269	290					
260	86	108	129	151	172	194	215	237	258	280	301					
270	89	112	134	156	178	201	223	245	268	290						
280	92	116	139	162	185	208	231	254	277	300						
290	96	120	143	167	191	215	239	263	287							
300	102	127	153	178	204	229	255	280	306							
320	108	135	163	190	217	244	271	298								
340	115	143	172	201	229	258	287									
360	121	151	182	212	242	273	303									
380	127	159	191	223	255	287										
400	135	169	203	237	271	305										
425	143	179	215	251	287											
450	151	189	227	265	303											
475	159	199	239	279												
500	167	209	251	293												
525	175	219	263	307												
550	183	229	275													
575	191	239	287													
600																

Gear Box		Medium RATE CHART KG. PER H.														GB005
Weight per litre		1.10														Figures in body of chart = mm of door opening
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	
Rate																
20																
30															26	
40															26	
50									26	29	32	35	38	41	43	
60									30	35	39	43	48	52	57	
70		25	30	35	41	46	51	56	61	66	71	76	81	86	91	
80		29	35	41	46	52	58	64	70	75	81	87	93	99	104	
90	26	33	39	46	52	59	65	72	78	85	91	98	104	111	117	
100	29	36	43	51	58	65	72	80	87	94	101	109	116	123	130	
110	32	40	48	56	64	72	80	88	96	104	112	120	127	135	143	
120	35	43	52	61	70	78	87	96	104	113	122	130	139	148	156	
130	38	47	57	66	75	85	94	104	113	122	132	141	151	160	170	
140	41	51	61	71	81	91	101	112	122	132	142	152	162	172	183	
150	43	54	65	76	87	98	109	120	130	141	152	163	174	185	196	
160	46	58	70	81	93	104	116	127	139	151	162	174	185	197	209	
170	49	62	74	86	99	111	123	135	148	160	172	185	197	209	222	
180	52	65	78	91	104	117	130	143	156	170	183	196	209	222	235	
190	55	69	83	96	110	124	138	151	165	179	193	206	220	234	248	
200	58	72	87	101	116	130	145	159	174	188	203	217	232	246	261	
210	61	76	91	106	122	137	152	167	183	198	213	228	243	259	274	
220	64	80	96	112	127	143	159	175	191	207	223	239	255	271	287	
230	67	83	100	117	133	150	167	183	200	217	233	250	267	283	300	
240	70	87	104	122	139	156	174	191	209	226	243	261	278	296		
250	72	91	109	127	145	163	181	199	217	235	254	272	290	308		
260	75	94	113	132	151	170	188	207	226	245	264	283	301			
270	78	98	117	137	156	176	196	215	235	254	274	293				
280	81	101	122	142	162	183	203	223	243	264	284	304				
290	84	105	126	147	168	189	210	231	252	273	294					
300	87	109	130	152	174	196	217	239	261	283	304					
320	93	116	139	162	185	209	232	255	278	301						
340	99	123	148	172	197	222	246	271	296							
360	104	130	156	183	209	235	261	287								
380	110	138	165	193	220	248	275	303								
400	116	145	174	203	232	261	290									
425	123	154	185	215	246	277	308									
450	130	163	196	228	261	293										
475	138	172	206	241	275	310										
500	145	181	217	254	290											
525	152	190	228	266	304											
550	159	199	239	279												
575	167	208	250	292												
600	174	217	261	304												



For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box	Medium RATE CHART KG. PER H.															GB005
Weight per litre	1.40															
Figures in body of chart = mm of door opening																
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
20	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
30	-	-	-	-	-	-	-	-	-	-	-	26	27	29	31	
40	-	-	-	-	-	-	-	25	27	30	32	34	36	39	41	
50	-	-	-	-	26	28	31	34	38	41	44	48	51	55	58	
60	-	-	-	27	31	34	38	41	44	48	52	56	60	64	68	
70	-	-	28	32	36	40	44	48	52	56	60	64	68	72		
80	-	27	32	36	41	46	50	55	59	64	68	73	77	82		
90	26	31	36	41	46	51	56	61	67	72	77	82	87	92		
100	28	34	40	46	51	57	63	68	74	80	85	91	97	102		
110	25	31	38	44	50	56	63	69	75	81	88	94	100	106	113	
120	27	34	41	48	55	61	68	75	82	89	96	102	109	116	123	
130	30	37	44	52	59	67	74	81	89	96	104	111	118	126	133	
140	32	40	48	56	64	72	80	88	96	104	112	120	127	135	143	
150	34	43	51	60	68	77	85	94	102	111	120	128	137	145	154	
160	36	46	55	64	73	82	91	100	109	118	127	137	146	155	164	
170	39	48	58	68	77	87	97	106	116	126	135	145	155	164	174	
180	41	51	61	72	82	92	102	113	123	133	143	154	164	174	184	
190	43	54	65	76	87	97	108	119	130	141	151	162	173	184	195	
200	46	57	68	80	91	102	114	125	137	148	159	171	182	194	205	
210	48	60	72	84	96	108	120	131	143	155	167	179	191	203	215	
220	50	63	75	88	100	113	125	138	150	163	175	188	200	213	225	
230	52	65	79	92	105	118	131	144	157	170	183	196	209	223	236	
240	55	68	82	96	109	123	137	150	164	178	191	205	219	232	246	
250	57	71	85	100	114	128	142	157	171	185	199	213	228	242	256	
260	59	74	89	104	118	133	148	163	178	192	207	222	237	252	266	
270	61	77	92	108	123	138	154	169	184	200	215	231	246	261	277	
280	64	80	96	112	127	143	159	175	191	207	223	239	255	271	287	
290	66	83	99	116	132	149	165	182	198	215	231	248	264	281	297	
300	68	85	102	120	137	154	171	188	205	222	239	256	273	290	307	
320	73	91	109	127	146	164	182	200	219	237	255	273	291	310		
340	77	97	116	135	155	174	194	213	232	252	271	290	310			
360	82	102	123	143	164	184	205	225	246	266	287	307				
380	87	108	130	151	173	195	216	238	260	281	303					
400	91	114	137	159	182	205	228	250	273	296						
425	97	121	145	169	194	218	242	266	290							
450	102	128	154	179	205	231	256	282	307							
475	108	135	162	189	216	243	270	297								
500	114	142	171	199	228	256	285									
525	120	149	179	209	239	269	299									
550	125	157	188	219	250	282										
575	131	164	196	229	262	295										
600	137	171	205	239	273	307										

Gear Box	Medium RATE CHART KG. PER H.															GB005
Weight per litre	1.50															
Figures in body of chart = mm of door opening																
Width	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
20	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
30	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
40	-	-	-	-	-	-	-	-	-	-	-	-	25	27	29	
50	-	-	-	-	-	-	-	-	-	-	-	25	28	30	32	
60	-	-	-	-	-	-	-	-	-	-	-	25	28	30	32	
70	-	-	-	-	-	-	-	-	-	-	-	29	32	35	38	
80	-	-	25	30	34	38	42	47	51	55	59	64	68	72	76	
90	-	-	29	33	38	43	48	53	57	62	67	72	76	81	86	
100	-	27	32	37	42	48	53	58	64	69	74	80	85	90	96	
110	25	29	35	41	47	53	58	64	70	76	82	88	93	99	105	
120	27	32	38	45	51	57	64	70	76	83	89	96	102	108	115	
130	28	35	41	48	55	62	69	76	83	90	97	104	110	117	124	
140	30	37	45	52	59	67	74	82	89	97	104	112	119	126	134	
150	32	40	48	56	64	72	80	88	96	104	112	120	127	135	143	
160	34	42	51	59	68	76	85	93	102	110	119	127	136	144	153	
170	36	45	54	63	72	81	90	99	108	117	126	135	144	154	163	
180	38	48	57	67	76	86	96	105	115	124	134	143	153	163	172	
190	40	50	61	71	81	91	101	111	121	131	141	151	161	172	182	
200	42	53	64	74	85	96	106	117	127	138	149	159	170	181	191	
210	45	56	67	78	89	100	112	123	134	145	156	167	178	190	201	
220	47	58	70	82	93	105	117	129	140	152	164	175	187	199	210	
230	49	61	73	86	98	110	122	134	147	159	171	183	195	208	220	
240	51	64	76	89	102	115	127	140	153	166	178	191	204	217	229	
250	53	66	80	93	106	120	133	146	159	173	186	199	212	226	239	
260	55	69	83	97	110	124	138	152	166	180	193	207	221	235	249	
270	57	72	86	100	115	129	143	158	172	186	201	215	229	244	258	
280	59	74	89	104	119	134	149	164	178	193	208	223	238	253	268	
290	62	77	92	108	123	139	154	169	185	200	216	231	246	262	277	
300	64	80	96	112	127	143	159	175	191	207	223	239	255	271	287	
320	68	85	102	119	136	153	170	187	204	221	238	255	272	289	306	
340	72	90	108	126	144	163	181	199	217	235	253	271	289	307		
360	76	96	115	134	153	172	191	210	229	249	268	287	306			
380	81	101	121	141	161	182	202	222	242	262	283	303				
400	85	106	127	149	170	191	212	234	255	276	297					
425	90	113	135	158	181	203	226	248	271	293						
450	96	120	143	167	191	215	239	263	287							
475	101	126	151	177	202	227	252	278	303							
500	106	133	159	186	212	239	266	292								
525	112	139	167	195	223	251	279	307								
550	117	146	175	205	234	263	292									
575	122	153	183	214	244	275	305									
600	127	159	191	223	255	287										



For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		0.70												Figures in body of chart = mm of door opening	
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
600	32	40	48	56	64	73	81	89	97	105	113	121	129	137	145
625	34	42	50	59	67	76	84	92	101	109	118	126	134	143	151
650	35	44	52	61	70	79	87	96	105	114	122	131	140	148	157
675	36	45	54	63	73	82	91	100	109	118	127	136	145	154	163
700	38	47	56	66	75	85	94	103	113	122	132	141	150	160	169
750	40	50	60	71	81	91	101	111	121	131	141	151	161	171	181
800	43	54	64	75	86	97	107	118	129	140	151	161	172	183	193
850	46	57	69	80	91	103	114	126	137	148	160	171	183	194	206
900	48	60	73	85	97	109	121	133	145	157	169	181	193	206	218
950	51	64	77	89	102	115	128	140	153	166	179	191	204	217	230
1000	54	67	81	94	107	121	134	148	161	175	188	202	215	228	242
1050	56	71	85	99	113	127	141	155	169	183	198	212	226	240	254
1100	59	74	89	103	118	133	148	163	177	192	207	222	236	251	266
1150	62	77	93	108	124	139	155	170	185	201	216	232	247	263	278
1200	64	81	97	113	129	145	161	177	193	210	226	242	258	274	290
1250	67	84	101	118	134	151	168	185	202	218	235	252	269	286	302
1300	70	87	105	122	140	157	175	192	210	227	245	262	279	297	
1350	73	91	109	127	145	163	181	200	218	236	254	272	290	308	
1400	75	94	113	132	150	169	188	207	226	245	263	282	301		
1450	78	97	117	136	156	175	195	214	234	253	273	292			
1500	81	101	121	141	161	181	202	222	242	262	282	302			
1550	83	104	125	146	167	187	208	229	250	271	292				
1600	86	107	129	151	172	193	215	236	258	279	301				
1650	89	111	133	155	177	200	222	244	266	288					
1700	91	114	137	160	183	206	228	251	274	297					
1800	97	121	145	169	193	218	242	266	290						
1900	102	128	153	179	204	230	255	281	306						
2000	107	134	161	188	215	242	269	296							
2500	134	168	202	235	269	302									
3000	161	202	242	282											
3500	188	235	282												
4000	215	269													
5000	269														
6000															
7000															
8000															
9000															
10000															

  

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		0.75												Figures in body of chart = mm of door opening	
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
600	30	38	45	53	60	68	75	83	90	98	105	113	120	128	135
625	31	39	47	55	63	71	78	86	94	102	110	118	125	133	141
650	33	41	49	57	65	73	82	90	98	106	114	122	130	139	147
675	34	42	51	59	68	76	85	93	102	110	119	127	135	144	152
700	35	44	53	61	70	79	88	97	105	114	123	132	140	149	158
750	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
800	40	50	60	70	80	90	100	110	120	130	140	151	161	171	181
850	43	53	64	75	85	96	107	117	128	139	149	160	171	181	192
900	45	56	68	79	90	102	113	124	135	147	158	169	181	192	203
950	48	60	71	83	95	107	119	131	143	155	167	179	191	203	214
1000	50	63	75	88	100	113	125	138	151	163	176	188	201	213	226
1050	53	66	79	92	105	119	132	145	158	171	184	198	211	224	237
1100	55	69	83	97	110	124	138	152	166	179	193	207	221	235	248
1150	58	72	87	101	115	130	144	159	173	187	202	216	231	245	260
1200	60	75	90	105	120	135	151	166	181	196	211	226	241	256	271
1250	63	78	94	110	125	141	157	172	188	204	219	235	251	267	282
1300	65	82	98	114	130	147	163	179	196	212	228	245	261	277	293
1350	68	85	102	119	135	152	169	186	203	220	237	254	271	288	305
1400	70	88	105	123	140	158	176	193	211	228	246	263	281	298	
1450	73	91	109	127	145	164	182	200	218	236	255	273	291	309	
1500	75	94	113	132	151	169	188	207	226	245	263	282	301		
1550	78	97	117	136	156	175	194	214	233	253	272	292			
1600	80	100	120	140	161	181	201	221	241	261	281	301			
1650	83	103	124	145	166	186	207	228	248	269	290				
1700	85	107	128	149	171	192	213	235	256	277	298				
1800	90	113	135	158	181	203	226	248	271	293					
1900	95	119	143	167	191	214	238	262	286	310					
2000	100	125	151	176	201	226	251	276	301						
2500	125	157	188	219	251	282									
3000	151	188	226	263	301										
3500	176	219	263	307											
4000	201	251	301												
5000	251														
6000	301														
7000															
8000															
9000															
10000															

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain.. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		0.80													Figures in body of chart = mm of door opening
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
600	28	35	42	49	56	63	71	78	85	92	99	106	113	120	127
625	29	37	44	51	59	66	73	81	88	96	103	110	118	125	132
650	31	38	46	53	61	69	76	84	92	99	107	115	122	130	138
675	32	40	48	56	63	71	79	87	95	103	111	119	127	135	143
700	33	41	49	58	66	74	82	91	99	107	115	123	132	140	148
750	35	44	53	62	71	79	88	97	106	115	123	132	141	150	159
800	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
850	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180
900	42	53	63	74	85	95	106	116	127	138	148	159	169	180	190
950	45	56	67	78	89	101	112	123	134	145	156	168	179	190	201
1000	47	59	71	82	94	106	118	129	141	153	165	176	188	200	212
1050	49	62	74	86	99	111	123	136	148	160	173	185	198	210	222
1100	52	65	78	91	103	116	129	142	155	168	181	194	207	220	233
1150	54	68	81	95	108	122	135	149	162	176	189	203	216	230	243
1200	56	71	85	99	113	127	141	155	169	183	198	212	226	240	254
1250	59	73	88	103	118	132	147	162	176	191	206	220	235	250	265
1300	61	76	92	107	122	138	153	168	183	199	214	229	245	260	275
1350	63	79	95	111	127	143	159	175	190	206	222	238	254	270	286
1400	66	82	99	115	132	148	165	181	198	214	230	247	263	280	296
1450	68	85	102	119	136	153	170	188	205	222	239	256	273	290	307
1500	71	88	106	123	141	159	176	194	212	229	247	265	282	300	
1550	73	91	109	128	146	164	182	200	219	237	255	273	292	310	
1600	75	94	113	132	151	169	188	207	226	245	263	282	301		
1650	78	97	116	136	155	175	194	213	233	252	272	291			
1700	80	100	120	140	160	180	200	220	240	260	280	300			
1800	85	106	127	148	169	190	212	233	254	275	296				
1900	89	112	134	156	179	201	223	246	268	290					
2000	94	118	141	165	188	212	235	259	282	306					
2500	118	147	176	206	235	265	294								
3000	141	176	212	247	282										
3500	165	206	247	288											
4000	188	235	282												
5000	235	294													
6000	282														
7000															
8000															
9000															
10000															

  

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		0.90													Figures in body of chart = mm of door opening
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
600	25	31	38	44	50	56	63	69	75	82	88	94	100	107	113
625	26	33	39	46	52	59	65	72	78	85	91	98	105	111	118
650	27	34	41	48	54	61	68	75	82	88	95	102	109	115	122
675	28	35	42	49	56	63	71	78	85	92	99	106	113	120	127
700	29	37	44	51	59	66	73	80	88	95	102	110	117	124	132
750	31	39	47	55	63	71	78	86	94	102	110	118	125	133	141
800	33	42	50	59	67	75	84	92	100	109	117	125	134	142	151
850	36	44	53	62	71	80	89	98	107	115	124	133	142	151	160
900	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
950	40	50	60	70	79	89	99	109	119	129	139	149	159	169	179
1000	42	52	63	73	84	94	105	115	125	136	146	157	167	178	188
1050	44	55	66	77	88	99	110	121	132	143	154	165	176	187	198
1100	46	57	69	80	92	103	115	126	138	149	161	172	184	195	207
1150	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216
1200	50	63	75	88	100	113	125	138	151	163	176	188	201	213	226
1250	52	65	78	91	105	118	131	144	157	170	183	196	209	222	235
1300	54	68	82	95	109	122	136	149	163	177	190	204	217	231	245
1350	56	71	85	99	113	127	141	155	169	183	198	212	226	240	254
1400	59	73	88	102	117	132	146	161	176	190	205	219	234	249	263
1450	61	76	91	106	121	136	152	167	182	197	212	227	242	258	273
1500	63	78	94	110	125	141	157	172	188	204	219	235	251	267	282
1550	65	81	97	113	130	146	162	178	194	211	227	243	259	275	292
1600	67	84	100	117	134	151	167	184	201	217	234	251	268	284	301
1650	69	86	103	121	138	155	172	190	207	224	241	259	276	293	
1700	71	89	107	124	142	160	178	195	213	231	249	267	284	302	
1800	75	94	113	132	151	169	188	207	226	245	263	282	301		
1900	79	99	119	139	159	179	199	218	238	258	278	298			
2000	84	105	125	146	167	188	209	230	251	272	293				
2500	105	131	157	183	209	235	261	287							
3000	125	157	188	219	251	282									
3500	146	183	219	256	293										
4000	167	209	251	293											
5000	209	261													
6000	251														
7000	293														
8000															
9000															
10000															

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain.. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		Figures in body of chart = mm of door opening													
Width.		1.00	14	16	18	20	22	24	26	28	30	32	34	36	
Rate															
600		28	34	40	45	51	56	62	68	73	79	85	90	96	102
625		29	35	41	47	53	59	65	71	76	82	88	94	100	106
650		31	37	43	49	55	61	67	73	79	86	92	98	104	110
675	25	32	38	44	51	57	63	70	76	83	89	95	102	108	114
700	26	33	40	46	53	59	66	72	79	86	92	99	105	112	119
750	28	35	42	49	56	63	71	78	85	92	99	106	113	120	127
800	30	38	45	53	60	68	75	83	90	98	105	113	120	128	135
850	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144
900	34	42	51	59	68	76	85	93	102	110	119	127	135	144	152
950	36	45	54	63	71	80	89	98	107	116	125	134	143	152	161
1000	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
1050	40	49	59	69	79	89	99	109	119	128	138	148	158	168	178
1100	41	52	62	72	83	93	103	114	124	135	145	155	166	176	186
1150	43	54	65	76	87	97	108	119	130	141	151	162	173	184	195
1200	45	56	68	79	90	102	113	124	135	147	158	169	181	192	203
1250	47	59	71	82	94	106	118	129	141	153	165	176	188	200	212
1300	49	61	73	86	98	110	122	135	147	159	171	183	196	208	220
1350	51	63	76	89	102	114	127	140	152	165	178	190	203	216	229
1400	53	66	79	92	105	119	132	145	158	171	184	198	211	224	237
1450	55	68	82	95	109	123	136	150	164	177	191	205	218	232	246
1500	56	71	85	99	113	127	141	155	169	183	198	212	226	240	254
1550	58	73	87	102	117	131	146	160	175	190	204	219	233	248	262
1600	60	75	90	105	120	135	151	166	181	196	211	226	241	256	271
1650	62	78	93	109	124	140	155	171	186	202	217	233	248	264	279
1700	64	80	96	112	128	144	160	176	192	208	224	240	256	272	288
1800	68	85	102	119	135	152	169	186	203	220	237	254	271	288	305
1900	71	89	107	125	143	161	179	197	214	232	250	268	286	304	
2000	75	94	113	132	151	169	188	207	226	245	263	282	301		
2500	94	118	141	165	188	212	235	259	282	306					
3000	113	141	169	198	226	254	282								
3500	132	165	198	230	263	296									
4000	151	188	226	263	301										
5000	188	235	282												
6000	226	282													
7000	263														
8000	301														
9000															
10000															

  

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		Figures in body of chart = mm of door opening													
Width.		1.10	14	16	18	20	22	24	26	28	30	32	34	36	
Rate															
600		26	31	36	41	46	51	56	62	67	72	77	82	87	92
625		27	32	37	43	48	53	59	64	69	75	80	86	91	96
650		28	33	39	44	50	56	61	67	72	78	83	89	94	100
675		29	35	40	46	52	58	63	69	75	81	87	92	98	104
700		30	36	42	48	54	60	66	72	78	84	90	96	102	108
750	26	32	38	45	51	58	64	71	77	83	90	96	103	109	115
800	27	34	41	48	55	62	68	75	82	89	96	103	109	116	123
850	29	36	44	51	58	65	73	80	87	94	102	109	116	124	131
900	31	38	46	54	62	69	77	85	92	100	108	115	123	131	139
950	32	41	49	57	65	73	81	89	97	106	114	122	130	138	146
1000	34	43	51	60	68	77	86	94	103	111	120	128	137	145	154
1050	36	45	54	63	72	81	90	99	108	117	126	135	144	153	162
1100	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
1150	39	49	59	69	79	89	98	108	118	128	138	148	157	167	177
1200	41	51	62	72	82	92	103	113	123	133	144	154	164	174	185
1250	43	53	64	75	86	96	107	118	128	139	150	160	171	182	192
1300	44	56	67	78	89	100	111	122	133	145	156	167	178	189	200
1350	46	58	69	81	92	104	115	127	139	150	162	173	185	196	208
1400	48	60	72	84	96	108	120	132	144	156	168	180	192	204	215
1450	50	62	74	87	99	112	124	136	149	161	174	186	198	211	223
1500	51	64	77	90	103	115	128	141	154	167	180	192	205	218	231
1550	53	66	80	93	106	119	133	146	159	172	186	199	212	225	239
1600	55	68	82	96	109	123	137	151	164	178	192	205	219	233	246
1650	56	71	85	99	113	127	141	155	169	183	198	212	226	240	254
1700	58	73	87	102	116	131	145	160	174	189	204	218	233	247	262
1800	62	77	92	108	123	139	154	169	185	200	215	231	246	262	277
1900	65	81	97	114	130	146	162	179	195	211	227	244	260	276	292
2000	68	86	103	120	137	154	171	188	205	222	239	257	274	291	308
2500	86	107	128	150	171	192	214	235	257	278	299				
3000	103	128	154	180	205	231	257	282	308						
3500	120	150	180	210	239	269	299								
4000	137	171	205	239	274	308									
5000	171	214	257	299											
6000	205	257	308												
7000	239	299													
8000	274														
9000	308														
10000															



For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain.. Accuracy of final settings operators responsibility on use  
 Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART KG. PER HA.													gb005
Weight per litre		Figures in body of chart = mm of door opening													
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
600			28	33	38	42	47	52	56	61	66	71	75	80	85
625			29	34	39	44	49	54	59	64	69	73	78	83	88
650		25	31	36	41	46	51	56	61	66	71	76	82	87	92
675		26	32	37	42	48	53	58	63	69	74	79	85	90	95
700		27	33	38	44	49	55	60	66	71	77	82	88	93	99
750		29	35	41	47	53	59	65	71	76	82	88	94	100	106
800	25	31	38	44	50	56	63	69	75	82	88	94	100	107	113
850	27	33	40	47	53	60	67	73	80	87	93	100	107	113	120
900	28	35	42	49	56	63	71	78	85	92	99	106	113	120	127
950	30	37	45	52	60	67	74	82	89	97	104	112	119	127	134
1000	31	39	47	55	63	71	78	86	94	102	110	118	125	133	141
1050	33	41	49	58	66	74	82	91	99	107	115	123	132	140	148
1100	34	43	52	60	69	78	86	95	103	112	121	129	138	147	155
1150	36	45	54	63	72	81	90	99	108	117	126	135	144	153	162
1200	38	47	56	66	75	85	94	103	113	122	132	141	150	160	169
1250	39	49	59	69	78	88	98	108	118	127	137	147	157	167	176
1300	41	51	61	71	82	92	102	112	122	132	143	153	163	173	183
1350	42	53	63	74	85	95	106	116	127	138	148	159	169	180	190
1400	44	55	66	77	88	99	110	121	132	143	154	165	176	187	198
1450	45	57	68	80	91	102	114	125	136	148	159	170	182	193	205
1500	47	59	71	82	94	106	118	129	141	153	165	176	188	200	212
1550	49	61	73	85	97	109	121	134	146	158	170	182	194	207	219
1600	50	63	75	88	100	113	125	138	151	163	176	188	201	213	226
1650	52	65	78	91	103	116	129	142	155	168	181	194	207	220	233
1700	53	67	80	93	107	120	133	147	160	173	187	200	213	227	240
1800	56	71	85	99	113	127	141	155	169	183	198	212	226	240	254
1900	60	74	89	104	119	134	149	164	179	194	209	223	238	253	268
2000	63	78	94	110	125	141	157	172	188	204	219	235	251	267	282
2500	78	98	118	137	157	176	196	216	235	255	274	294			
3000	94	118	141	165	188	212	235	259	282	306					
3500	110	137	165	192	219	247	274	302							
4000	125	157	188	219	251	282									
5000	157	196	235	274											
6000	188	235	282												
7000	219	274													
8000	251														
9000	282														
10000															

  

Gear Box...High. Gear		RATE CHART KG. PER HA.													gb005
Weight per litre		Figures in body of chart = mm of door opening													
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
600			26	30	35	39	43	48	52	56	61	65	69	74	78
625			27	32	36	41	45	50	54	59	63	68	72	77	81
650			28	33	38	42	47	52	56	61	66	71	75	80	85
675			29	34	39	44	49	54	59	63	68	73	78	83	88
700		25	30	35	41	46	51	56	61	66	71	76	81	86	91
750		27	33	38	43	49	54	60	65	71	76	81	87	92	98
800		29	35	41	46	52	58	64	69	75	81	87	93	98	104
850		31	37	43	49	55	62	68	74	80	86	92	98	105	111
900	26	33	39	46	52	59	65	72	78	85	91	98	104	111	117
950	27	34	41	48	55	62	69	76	82	89	96	103	110	117	124
1000	29	36	43	51	58	65	72	80	87	94	101	109	116	123	130
1050	30	38	46	53	61	68	76	84	91	99	106	114	122	129	137
1100	32	40	48	56	64	72	80	88	96	103	111	119	127	135	143
1150	33	42	50	58	67	75	83	92	100	108	116	125	133	141	150
1200	35	43	52	61	69	78	87	96	104	113	122	130	139	148	156
1250	36	45	54	63	72	81	90	99	109	118	127	136	145	154	163
1300	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
1350	39	49	59	68	78	88	98	107	117	127	137	147	156	166	176
1400	41	51	61	71	81	91	101	111	122	132	142	152	162	172	182
1450	42	52	63	73	84	94	105	115	126	136	147	157	168	178	189
1500	43	54	65	76	87	98	109	119	130	141	152	163	174	185	195
1550	45	56	67	79	90	101	112	123	135	146	157	168	179	191	202
1600	46	58	69	81	93	104	116	127	139	151	162	174	185	197	208
1650	48	60	72	84	96	107	119	131	143	155	167	179	191	203	215
1700	49	62	74	86	98	111	123	135	148	160	172	185	197	209	221
1800	52	65	78	91	104	117	130	143	156	169	182	195	208	221	234
1900	55	69	82	96	110	124	137	151	165	179	192	206	220	234	247
2000	58	72	87	101	116	130	145	159	174	188	203	217	232	246	260
2500	72	90	109	127	145	163	181	199	217	235	253	271	289	308	
3000	87	109	130	152	174	195	217	239	260	282	304				
3500	101	127	152	177	203	228	253	279	304						
4000	116	145	174	203	232	260	289								
5000	145	181	217	253	289										
6000	174	217	260	304											
7000	203	253	304												
8000	232	289													
9000	260														
10000	289														

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain.. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		1.40	Figures in body of chart = mm of door opening												
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate															
600				28	32	36	40	44	48	52	56	60	64	69	73
625			25	29	34	38	42	46	50	55	59	63	67	71	76
650			26	31	35	39	44	48	52	57	61	66	70	74	79
675			27	32	36	41	45	50	54	59	63	68	73	77	82
700			28	33	38	42	47	52	56	61	66	71	75	80	85
750		25	30	35	40	45	50	55	60	66	71	76	81	86	91
800		27	32	38	43	48	54	59	64	70	75	81	86	91	97
850		29	34	40	46	51	57	63	69	74	80	86	91	97	103
900		30	36	42	48	54	60	67	73	79	85	91	97	103	109
950	26	32	38	45	51	57	64	70	77	83	89	96	102	109	115
1000	27	34	40	47	54	60	67	74	81	87	94	101	107	114	121
1050	28	35	42	49	56	63	71	78	85	92	99	106	113	120	127
1100	30	37	44	52	59	67	74	81	89	96	103	111	118	126	133
1150	31	39	46	54	62	70	77	85	93	100	108	116	124	131	139
1200	32	40	48	56	64	73	81	89	97	105	113	121	129	137	145
1250	34	42	50	59	67	76	84	92	101	109	118	126	134	143	151
1300	35	44	52	61	70	79	87	96	105	114	122	131	140	148	157
1350	36	45	54	63	73	82	91	100	109	118	127	136	145	154	163
1400	38	47	56	66	75	85	94	103	113	122	132	141	150	160	169
1450	39	49	58	68	78	88	97	107	117	127	136	146	156	166	175
1500	40	50	60	71	81	91	101	111	121	131	141	151	161	171	181
1550	42	52	62	73	83	94	104	115	125	135	146	156	167	177	187
1600	43	54	64	75	86	97	107	118	129	140	151	161	172	183	193
1650	44	55	67	78	89	100	111	122	133	144	155	166	177	188	200
1700	46	57	69	80	91	103	114	126	137	148	160	171	183	194	206
1800	48	60	73	85	97	109	121	133	145	157	169	181	193	206	218
1900	51	64	77	89	102	115	128	140	153	166	179	191	204	217	230
2000	54	67	81	94	107	121	134	148	161	175	188	202	215	228	242
2500	67	84	101	118	134	151	168	185	202	218	235	252	269	286	302
3000	81	101	121	141	161	181	202	222	242	262	282	302			
3500	94	118	141	165	188	212	235	259	282	306					
4000	107	134	161	188	215	242	269	296							
5000	134	168	202	235	269	302									
6000	161	202	242	282											
7000	188	235	282												
8000	215	269													
9000	242	302													
10000	269														

  

Gear Box...High. Gear		RATE CHART KG. PER HA.												gb005	
Weight per litre		1.50	Figures in body of chart = mm of door opening												
Width.	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
Rate															
600				26	30	34	38	41	45	49	53	56	60	64	68
625				27	31	35	39	43	47	51	55	59	63	67	71
650				29	33	37	41	45	49	53	57	61	65	69	73
675			25	30	34	38	42	47	51	55	59	63	68	72	76
700			26	31	35	40	44	48	53	57	61	66	70	75	79
750			28	33	38	42	47	52	56	61	66	71	75	80	85
800		25	30	35	40	45	50	55	60	65	70	75	80	85	90
850		27	32	37	43	48	53	59	64	69	75	80	85	91	96
900		28	34	40	45	51	56	62	68	73	79	85	90	96	102
950		30	36	42	48	54	60	66	71	77	83	89	95	101	107
1000	25	31	38	44	50	56	63	69	75	82	88	94	100	107	113
1050	26	33	40	46	53	59	66	72	79	86	92	99	105	112	119
1100	28	34	41	48	55	62	69	76	83	90	97	103	110	117	124
1150	29	36	43	50	58	65	72	79	87	94	101	108	115	123	130
1200	30	38	45	53	60	68	75	83	90	98	105	113	120	128	135
1250	31	39	47	55	63	71	78	86	94	102	110	118	125	133	141
1300	33	41	49	57	65	73	82	90	98	106	114	122	130	139	147
1350	34	42	51	59	68	76	85	93	102	110	119	127	135	144	152
1400	35	44	53	61	70	79	88	97	105	114	123	132	140	149	158
1450	36	45	55	64	73	82	91	100	109	118	127	136	145	155	164
1500	38	47	56	66	75	85	94	103	113	122	132	141	151	160	169
1550	39	49	58	68	78	87	97	107	117	126	136	146	156	165	175
1600	40	50	60	70	80	90	100	110	120	130	140	151	161	171	181
1650	41	52	62	72	83	93	103	114	124	135	145	155	166	176	186
1700	43	53	64	75	85	96	107	117	128	139	149	160	171	181	192
1800	45	56	68	79	90	102	113	124	135	147	158	169	181	192	203
1900	48	60	71	83	95	107	119	131	143	155	167	179	191	203	214
2000	50	63	75	88	100	113	125	138	151	163	176	188	201	213	226
2500	63	78	94	110	125	141	157	172	188	204	219	235	251	267	282
3000	75	94	113	132	151	169	188	207	226	245	263	282	301		
3500	88	110	132	154	176	198	219	241	263	285	307				
4000	100	125	151	176	201	226	251	276	301						
5000	125	157	188	219	251	282									
6000	151	188	226	263	301										
7000	176	219	263	307											
8000	201	251	301												
9000	226	282													
10000	251														

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.



For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.

For Use with **TRANSPREAD** Density Meter, Transpread Gear Box, gb005, 300 chain. Accuracy of final settings operators responsibility on use  
Other rates and rate calculator can be viewed at <http://www.transpread.com/Trailers/Homepage.htm>, also available in XL format for your own computer.