

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box... low. Gear		RATE CHART LB. PER ACRE gb003															
Density Lb. Per Cu Ft. 45		Figures in body of chart = mm of door opening															
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32		
Rate 20																	
30																	
40																	
50																26	
60																31	
70																36	
80																41	
90																46	
100																51	
110																57	
120																62	
130																67	
140																72	
150																77	
160																82	
170																87	
180																92	
190																98	
200																103	
210																108	
220																113	
230																118	
240																123	
250																128	
260																134	
270																139	
280																144	
290																149	
300																154	
320																164	
340																175	
360																185	
380																195	
400																206	
425																218	
450																231	
475																244	
500																257	
525																270	
550																283	
575																295	
600																	

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb003															
Density Lb. Per Cu Ft. 50		Figures in body of chart = mm of door opening															
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32		
Rate 20																	
30																	
40																	
50																26	
60																26	
70																28	
80																32	
90																37	
100																42	
110																46	
120																51	
130																55	
140																60	
150																65	
160																69	
170																74	
180																79	
190																83	
200																88	
210																92	
220																97	
230																102	
240																106	
250																111	
260																116	
270																120	
280																125	
290																129	
300																134	
320																139	
340																148	
360																157	
380																166	
400																176	
425																185	
450																197	
475																208	
500																220	
525																231	
550																243	
575																254	
600																266	

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003		
Density Lb. Per Cu Ft. 55													Figures in body of chart = mm of door opening															
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32													
Rate																												
20																												
30																												
40																												
50																												
60																												
70																												
80																												
90																												
100																												
110																												
120																												
130																												
140																												
150																												
160																												
170																												
180																												
190																												
200																												
210																												
220																												
230																												
240																												
250																												
260																												
270																												
280																												
290																												
300																												
320																												
340																												
360																												
380																												
400																												
425																												
450																												
475																												
500																												
525																												
550																												
575																												
600																												

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003		
Density Lb. Per Cu Ft. 60													Figures in body of chart = mm of door opening															
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32													
Rate																												
20																												
30																												
40																												
50																												
60																												
70																												
80																												
90																												
100																												
110																												
120																												
130																												
140																												
150																												
160																												
170																												
180																												
190																												
200																												
210																												
220																												
230																												
240																												
250																												
260																												
270																												
280																												
290																												
300																												
320																												
340																												
360																												
380																												
400																												
425																												
450																												
475																												
500																												
525																												
550																												
575																												
600																												

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003
Density Lb. Per Cu Ft. 65													Figures in body of chart = mm of door opening													
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
20																										
30																										
40																										
50																										
60																										
70																										
80																										
90																										
100																										
110																										
120																										
130																										
140																										
150																										
160																										
170																										
180																										
190																										
200																										
210																										
220																										
230																										
240																										
250																										
260																										
270																										
280																										
290																										
300																										
320																										
340																										
360																										
380																										
400																										
425																										
450																										
475																										
500																										
525																										
550																										
575																										
600																										

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003
Density Lb. Per Cu Ft. 70													Figures in body of chart = mm of door opening													
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
20																										
30																										
40																										
50																										
60																										
70																										
80																										
90																										
100																										
110																										
120																										
130																										
140																										
150																										
160																										
170																										
180																										
190																										
200																										
210																										
220																										
230																										
240																										
250																										
260																										
270																										
280																										
290																										
300																										
320																										
340																										
360																										
380																										
400																										
425																										
450																										
475																										
500																										
525																										
550																										
575																										
600																										

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003
Density Lb. Per Cu Ft. 75													Figures in body of chart = mm of door opening													
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
20																										
30																										
40																										
50																										
60																										
70																										
80																										
90																										
100																26										
110																26										
120																27										
130																27										
140																29										
150																29										
160																27										
170																29										
180																29										
190																31										
200																31										
210																32										
220																32										
230																34										
240																34										
250																35										
260																35										
270																37										
280																37										
290																40										
300																40										
320																43										
340																43										
360																46										
380																46										
400																49										
425																49										
450																52										
475																52										
500																55										
525																55										
550																59										
575																59										
600																59										

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003
Density Lb. Per Cu Ft. 80													Figures in body of chart = mm of door opening													
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
20																										
30																										
40																										
50																										
60																										
70																										
80																										
90																										
100																26										
110																26										
120																25										
130																27										
140																27										
150																27										
160																27										
170																28										
180																28										
190																28										
200																28										
210																28										
220																28										
230																28										
240																28										
250																28										
260																28										
270																28										
280																28										
290																28										
300																28										
320																28										
340																28										
360																28										
380																28										
400																28										
425																28										
450																28										
475																28										
500																28										
525																28										
550																28										
575																28										
600																28										

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003
Density Lb. Per Cu Ft.													90													Figures in body of chart = mm of door opening
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
20																										
30																										
40																										
50																										
60																										
70																										
80																										
90																										
100																26										
110																28										
120																31										
130																33										
140																36										
150																39										
160																41										
170																44										
180																46										
190																49										
200																51										
210																54										
220																57										
230																59										
240																62										
250																64										
260																67										
270																69										
280																72										
290																75										
300																77										
320																82										
340																87										
360																92										
380																98										
400																103										
425																109										
450																116										
475																122										
500																128										
525																135										
550																141										
575																148										
600																154										

Gear Box...Low. Gear													RATE CHART LB. PER ACRE													gb003
Density Lb. Per Cu Ft.													100													Figures in body of chart = mm of door opening
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
20																										
30																										
40																										
50																										
60																										
70																										
80																										
90																										
100																										
110																25										
120																28										
130																30										
140																32										
150																35										
160																37										
170																39										
180																42										
190																44										
200																46										
210																49										
220																51										
230																53										
240																55										
250																58										
260																60										
270																62										
280																65										
290																67										
300																69										
320																74										
340																79										
360																83										
380																88										
400																92										
425																98										
450																104										
475																110										
500																116										
525																121										
550																127										
575																133										
600																139										

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear													RATE CHART LB. PER ACRE gb003												
Density Lb. Per Cu Ft. 55													Figures in body of chart = mm of door opening												
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate									
200									27	30	33	36	39	42	45	45									
225									27	30	34	37	40	44	47	50									
250						26	30	34	37	41	45	49	52	52	56										
275						29	33	37	41	45	49	53	58	58	62										
300					27	31	36	40	45	49	54	58	63	63	67										
325					29	34	39	44	49	53	58	63	68	68	73										
350				26	31	37	42	47	52	58	63	68	73	73	78										
375				28	34	39	45	50	56	62	67	73	78	78	84										
400				30	36	42	48	54	60	66	72	78	84	84	90										
425			25	32	38	44	51	57	64	70	76	83	89	89	95										
450			27	34	40	47	54	61	67	74	81	87	94	94	101										
475			28	36	43	50	57	64	71	78	85	92	99	99	107										
500			30	37	45	52	60	67	75	82	90	97	105	105	112										
525			31	39	47	55	63	71	78	86	94	102	110	110	118										
550			33	41	49	58	66	74	82	90	99	107	115	115	123										
575		26	34	43	52	60	69	77	86	95	103	112	120	120	129										
600		27	36	45	54	63	72	81	90	99	108	117	126	126	135										
625		28	37	47	56	65	75	84	93	103	112	121	131	131	140										
650		29	39	49	58	68	78	87	97	107	117	126	136	136	146										
675		30	40	50	61	71	81	91	101	111	121	131	141	141	151										
700		31	42	52	63	73	84	94	105	115	126	136	146	146	157										
750		34	45	56	67	78	90	101	112	123	135	146	157	157	168										
800		36	48	60	72	84	96	108	120	132	143	155	167	167	179										
850	25	38	51	64	76	89	102	114	127	140	152	165	178	178	191										
900	27	40	54	67	81	94	108	121	135	148	161	175	188	188	202										
950	28	43	57	71	85	99	114	128	142	156	170	185	199	199	213										
1000	30	45	60	75	90	105	120	135	149	164	179	194	209	209	224										
1050	31	47	63	78	94	110	126	141	157	173	188	204	220	220	235										
1100	33	49	66	82	99	115	132	148	164	181	197	214	230	230	247										
1150	34	52	69	86	103	120	138	155	172	189	206	223	241	241	258										
1200	36	54	72	90	108	126	143	161	179	197	215	233	251	251	269										
1250	37	56	75	93	112	131	149	168	187	206	224	243	262	262	280										
1300	39	58	78	97	117	136	155	175	194	214	233	253	272	272	291										
1350	40	61	81	101	121	141	161	182	202	222	242	262	283	283											
1400	42	63	84	105	126	146	167	188	209	230	251	272	293	293											
1450	43	65	87	108	130	152	173	195	217	238	260	282													
1500	45	67	90	112	135	157	179	202	224	247	269	291													
1550	46	70	93	116	139	162	185	209	232	255	278														
1600	48	72	96	120	143	167	191	215	239	263	287														
1650	49	74	99	123	148	173	197	222	247	271	296														
1700	51	76	102	127	152	178	203	229	254	280															
1800	54	81	108	135	161	188	215	242	269	296															

Gear Box...Med. Gear													RATE CHART LB. PER ACRE gb003												
Density Lb. Per Cu Ft. 60													Figures in body of chart = mm of door opening												
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate									
200																27									
225																30									
250																33									
275																36									
300																38									
325																41									
350																44									
375																47									
400																50									
425																53									
450																56									
475																59									
500																62									
525																65									
550																68									
575																71									
600																74									
625																77									
650																80									
675																83									
700																86									
750																89									
800																92									
850																95									
900																98									
950																101									
1000																104									
1050																107									
1100																110									
1150																113									
1200																116									
1250																119									
1300																122									
1350																125									
1400																128									
1450																131									
1500																134									
1550																137									
1600																140									
1650																143									
1700																146									
1800																149									

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear													RATE CHART LB. PER ACRE gb003												
Density Lb. Per Cu Ft. 65													Figures in body of chart = mm of door opening												
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate									
200									25	28	30	33	35	38	38										
225								26	28	31	34	37	40	40	43										
250							25	28	32	35	38	41	44	44	47										
275							28	31	35	38	42	45	49	49	52										
300						27	30	34	38	42	46	49	53	53	57										
325						29	33	37	41	45	49	53	58	58	62										
350					27	31	35	40	44	49	53	58	62	62	66										
375					28	33	38	43	47	52	57	62	66	66	71										
400				25	30	35	40	46	51	56	61	66	71	71	76										
425				27	32	38	43	48	54	59	65	70	75	75	81										
450				28	34	40	46	51	57	63	68	74	80	80	85										
475				30	36	42	48	54	60	66	72	78	84	84	90										
500			25	32	38	44	51	57	63	70	76	82	89	89	95										
525			27	33	40	46	53	60	66	73	80	86	93	93	100										
550			28	35	42	49	56	63	70	77	83	90	97	97	104										
575			29	36	44	51	58	65	73	80	87	95	102	102	109										
600			30	38	46	53	61	68	76	83	91	99	106	106	114										
625			32	40	47	55	63	71	79	87	95	103	111	111	119										
650			33	41	49	58	66	74	82	90	99	107	115	115	123										
675		26	34	43	51	60	68	77	85	94	102	111	120	120	128										
700		27	35	44	53	62	71	80	89	97	106	115	124	124	133										
750		28	38	47	57	66	76	85	95	104	114	123	133	133	142										
800		30	40	51	61	71	81	91	101	111	121	132	142	142	152										
850		32	43	54	65	75	86	97	108	118	129	140	151	151	161										
900		34	46	57	68	80	91	102	114	125	137	148	159	159	171										
950		36	48	60	72	84	96	108	120	132	144	156	168	168	180										
1000	25	38	51	63	76	89	101	114	126	139	152	164	177	177	190										
1050	27	40	53	66	80	93	106	120	133	146	159	173	186	186	199										
1100	28	42	56	70	83	97	111	125	139	153	167	181	195	195	209										
1150	29	44	58	73	87	102	116	131	145	160	175	189	204	204	218										
1200	30	46	61	76	91	106	121	137	152	167	182	197	212	212	228										
1250	32	47	63	79	95	111	126	142	158	174	190	206	221	221	237										
1300	33	49	66	82	99	115	132	148	164	181	197	214	230	230	247										
1350	34	51	68	85	102	120	137	154	171	188	205	222	239	239	256										
1400	35	53	71	89	106	124	142	159	177	195	212	230	248	248	266										
1450	37	55	73	92	110	128	147	165	183	202	220	238	257	257	275										
1500	38	57	76	95	114	133	152	171	190	209	228	247	266	266	285										
1550	39	59	78	98	118	137	157	176	196	216	235	255	274	274	294										
1600	40	61	81	101	121	142	162	182	202	223	243	263	283	283											
1650	42	63	83	104	125	146	167	188	209	230	250	271	292	292											
1700	43	65	86	108	129	151	172	194	215	237	258	280													
1800	46	68	91	114	137	159	182	205	228	250	273	296													

Gear Box...Med. Gear													RATE CHART LB. PER ACRE gb003												
Density Lb. Per Cu Ft. 70													Figures in body of chart = mm of door opening												
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate									
200																26									
225																28									
250																31									
275																33									
300																35									
325																38									
350																42									
375																46									
400																50									
425																55									
450																60									
475																65									
500																70									
525																75									
550																80									
575																85									
600																90									
625																95									
650																100									
675																105									
700																110									
750																115									
800																120									
850																125									
900																130									
950																135									
1000																140									
1050																145									
1100																150									
1150																155									
1200																160									
1250																165									
1300																170									
1350																175									
1400																180									
1450																185									
1500																190									
1550																195									
1600																200									
1650																205									
1700																210									
1800																215									

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb003													
Density Lb. Per Cu Ft.		Figures in body of chart = mm of door opening													
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate															
200											26	29	31	33	33
225										27	30	32	35	35	37
250									27	30	33	36	38	38	41
275								27	30	33	36	39	42	42	45
300								26	30	33	36	39	43	46	49
325								29	32	36	39	43	46	50	53
350					27	31	35	38	42	46	50	54	54	58	58
375					29	33	37	41	45	49	53	58	58	62	62
400				26	31	35	39	44	49	54	59	64	69	69	74
425				28	33	37	42	47	51	56	61	65	65	70	70
450				30	35	39	44	49	54	59	64	69	69	74	74
475			26	31	36	42	47	52	57	62	68	73	73	78	78
500			27	33	38	44	49	55	60	66	71	77	77	82	82
525			29	35	40	46	52	58	63	69	75	81	81	86	86
550			30	36	42	48	54	60	66	72	78	84	84	90	90
575		25	32	38	44	50	57	63	69	76	82	88	88	95	95
600		26	33	39	46	53	59	66	72	79	86	92	92	99	99
625		27	34	41	48	55	62	69	75	82	89	96	96	103	103
650		29	36	43	50	57	64	71	78	86	93	100	100	107	107
675		30	37	44	52	59	67	74	81	89	96	104	104	111	111
700		31	38	46	54	61	69	77	84	92	100	107	107	115	115
750		33	41	49	58	66	74	82	90	99	107	115	115	123	123
800	26	35	44	53	61	70	79	88	96	105	114	123	123	132	132
850	28	37	47	56	65	75	84	93	102	112	121	130	130	140	140
900	30	39	49	59	69	79	89	99	109	118	128	138	138	148	148
950	31	42	52	62	73	83	94	104	115	125	135	146	146	156	156
1000	33	44	55	66	77	88	99	110	121	132	143	153	153	164	164
1050	35	46	58	69	81	92	104	115	127	138	150	161	161	173	173
1100		36	48	60	72	84	96	109	121	133	145	157	169	169	181
1150	25	38	50	63	76	88	101	113	126	139	151	164	176	176	189
1200	26	39	53	66	79	92	105	118	132	145	158	171	184	184	197
1250	27	41	55	69	82	96	110	123	137	151	164	178	192	192	206
1300	29	43	57	71	86	100	114	128	143	157	171	185	200	200	214
1350	30	44	59	74	89	104	118	133	148	163	178	192	207	207	222
1400	31	46	61	77	92	107	123	138	153	169	184	200	215	215	230
1450	32	48	64	79	95	111	127	143	159	175	191	207	223	223	238
1500	33	49	66	82	99	115	132	148	164	181	197	214	230	230	247
1550	34	51	68	85	102	119	136	153	170	187	204	221	238	238	255
1600	35	53	70	88	105	123	140	158	175	193	210	228	246	246	263
1650	36	54	72	90	109	127	145	163	181	199	217	235	253	253	271
1700	37	56	75	93	112	130	149	168	186	205	224	242	261	261	280
1800	39	59	79	99	118	138	158	178	197	217	237	257	276	276	296

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb003													
Density Lb. Per Cu Ft.		Figures in body of chart = mm of door opening													
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate															
200															
225															
250															
275															
300															
325															
350															
375															
400															
425															
450															
475															
500															
525															
550															
575															
600															
625															
650															
675															
700															
750															
800															
850															
900															
950															
1000															
1050															
1100															
1150															
1200															
1250															
1300															
1350															
1400															
1450															
1500															
1550															
1600															
1650															
1700															
1800															

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb003														
Density Lb. Per Cu Ft.		Figures in body of chart = mm of door opening														
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																
200														26	27	27
225														27	29	31
250														32	32	34
275														35	35	38
300									25	27	30	33	36	38	41	
325									27	30	33	36	39	42	42	45
350									27	31	34	38	41	45	45	48
375									26	29	32	35	38	42	45	48
400									27	31	34	38	41	45	48	51
425									26	29	32	35	38	42	45	48
450									26	29	32	35	38	42	45	48
475									26	29	32	35	38	42	45	48
500									26	29	32	35	38	42	45	48
525									26	29	32	35	38	42	45	48
550									26	29	32	35	38	42	45	48
575									26	29	32	35	38	42	45	48
600									26	29	32	35	38	42	45	48
625									26	29	32	35	38	42	45	48
650									26	29	32	35	38	42	45	48
675									26	29	32	35	38	42	45	48
700									26	29	32	35	38	42	45	48
750									26	29	32	35	38	42	45	48
800									26	29	32	35	38	42	45	48
850									26	29	32	35	38	42	45	48
900									26	29	32	35	38	42	45	48
950									26	29	32	35	38	42	45	48
1000									26	29	32	35	38	42	45	48
1050									26	29	32	35	38	42	45	48
1100									26	29	32	35	38	42	45	48
1150									26	29	32	35	38	42	45	48
1200									26	29	32	35	38	42	45	48
1250									26	29	32	35	38	42	45	48
1300									26	29	32	35	38	42	45	48
1350									26	29	32	35	38	42	45	48
1400									26	29	32	35	38	42	45	48
1450									26	29	32	35	38	42	45	48
1500									26	29	32	35	38	42	45	48
1550									26	29	32	35	38	42	45	48
1600									26	29	32	35	38	42	45	48
1650									26	29	32	35	38	42	45	48
1700									26	29	32	35	38	42	45	48
1800									26	29	32	35	38	42	45	48

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb003														
Density Lb. Per Cu Ft.		Figures in body of chart = mm of door opening														
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																
200																
225																
250																
275																
300																
325																
350																
375																
400																
425																
450																
475																
500																
525																
550																
575																
600																
625																
650																
675																
700																
750																
800																
850																
900																
950																
1000																
1050																
1100																
1150																
1200																
1250																
1300																
1350																
1400																
1450																
1500																
1550																
1600																
1650																
1700																
1800																

For Use with **TRANSPREAD** Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE											gb003			
Density Lb. Per Cu Ft.		45											Figures in body of chart = mm of door opening			
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
500										26	28	31	33	36	38	41
525										27	30	32	35	38	40	43
550									25	28	31	34	37	39	42	45
575									26	29	32	35	38	41	44	47
600									28	31	34	37	40	43	46	49
625									29	32	35	38	42	45	48	51
650									27	30	33	37	40	43	47	50
675									28	31	35	38	41	45	48	52
700									25	29	32	36	39	43	47	50
750									27	31	35	38	42	46	50	54
800									29	33	37	41	45	49	53	57
850								26	30	35	39	43	48	52	57	61
900								28	32	37	41	46	51	55	60	64
950								29	34	39	44	49	53	58	63	68
1000								26	31	36	41	46	51	56	61	67
1050								27	32	38	43	48	54	59	64	70
1100								28	34	39	45	51	56	62	68	73
1150								29	35	41	47	53	59	65	71	76
1200								31	37	43	49	55	61	68	74	80
1250								26	32	38	45	51	58	64	70	77
1300								27	33	40	47	53	60	67	73	80
1350								28	35	41	48	55	62	69	76	83
1400								29	36	43	50	57	64	72	79	86
1450								30	37	45	52	59	67	74	82	89
1500								31	38	46	54	61	69	77	84	92
1550								32	40	48	56	63	71	79	87	95
1600								33	41	49	57	65	74	82	90	98
1650								25	34	42	51	59	68	76	84	93
1700								26	35	43	52	61	70	78	87	96
1800								28	37	46	55	64	74	83	92	101
1900								29	39	49	58	68	78	87	97	107
2000								31	41	51	61	72	82	92	102	113
2500								26	38	51	64	77	90	102	115	128
3000								31	46	61	77	92	107	123	138	154
3500								36	54	72	90	107	125	143	161	179
4000								41	61	82	102	123	143	164	184	205
5000								51	77	102	128	154	179	205	230	256
6000								61	92	123	154	184	215	246	276	307
7000								72	107	143	179	215	251	287		
8000								82	123	164	205	246	287			
9000								92	138	184	230	276				
10000								102	154	205	256	307				

Gear Box...High. Gear		RATE CHART LB. PER ACRE											gb003			
Density Lb. Per Cu Ft.		50											Figures in body of chart = mm of door opening			
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
500															25	28
525															27	29
550															28	30
575															29	32
600															30	33
625															31	34
650															32	35
675															33	36
700															34	37
750															35	38
800															36	39
850															37	41
900															38	42
950															39	43
1000															40	44
1050															41	45
1100															42	46
1150															43	47
1200															44	48
1250															45	49
1300															46	50
1350															47	51
1400															48	52
1450															49	53
1500															50	54
1550															51	55
1600															52	56
1650															53	57
1700															54	58
1800															55	59
1900															56	60
2000															57	61
2500															58	62
3000															59	63
3500															60	64
4000															61	65
5000															62	66
6000															63	67
7000															64	68
8000															65	69
9000															66	70
10000															67	71

For Use with **TRANSPREAD** Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb003	
Density Lb. Per Cu Ft.		55													Figures in body of chart = mm of door opening	
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
500												25	27	29	31	33
525												26	29	31	33	35
550											25	28	30	32	35	37
575											26	29	31	34	36	39
600										25	28	30	33	35	38	40
625										26	29	31	34	37	39	42
650										27	30	33	35	38	41	44
675									25	28	31	34	37	40	42	45
700									26	29	32	35	38	41	44	47
750						25	28		31	35	38	41	44	47	50	54
800						27	30		33	37	40	44	47	50	54	58
850						28	32		36	39	43	46	50	53	57	61
900						26	30	34	38	41	45	49	53	57	60	64
950						28	32	36	40	44	48	52	56	60	64	68
1000					25	29	33	38	42	46	50	54	59	63	67	71
1050					26	31	35	40	44	48	53	57	62	66	70	74
1100					28	32	37	41	46	51	55	60	64	69	74	78
1150					29	34	39	43	48	53	58	63	67	72	77	81
1200					25	30	35	40	45	50	55	60	65	70	75	80
1250					26	31	37	42	47	52	58	63	68	73	78	84
1300					27	33	38	44	49	54	60	65	71	76	82	87
1350					28	34	40	45	51	57	62	68	73	79	85	90
1400					29	35	41	47	53	59	64	70	76	82	88	94
1450					30	36	42	49	55	61	67	73	79	85	91	97
1500			25	31	38	44	50	57	63	69	75	82	88	94	100	106
1550			26	32	39	45	52	58	65	71	78	84	91	97	104	110
1600			27	33	40	47	54	60	67	74	80	87	94	100	107	114
1650			28	35	41	48	55	62	69	76	83	90	97	104	111	118
1700			28	36	43	50	57	64	71	78	85	93	100	107	114	121
1800			30	38	45	53	60	68	75	83	90	98	106	113	121	128
1900			32	40	48	56	64	72	80	87	95	103	111	119	127	135
2000		25	33	42	50	59	67	75	84	92	100	109	117	126	134	142
2500		31	42	52	63	73	84	94	105	115	126	136	147	157	167	177
3000	25	38	50	63	75	88	100	113	126	138	151	163	176	188	201	214
3500	29	44	59	73	88	103	117	132	147	161	176	190	205	220	234	249
4000	33	50	67	84	100	117	134	151	167	184	201	218	234	251	268	284
5000	42	63	84	105	126	147	167	188	209	230	251	272	293	314		
6000	50	75	100	126	151	176	201	226	251	276	301					
7000	59	88	117	147	176	205	234	264	293							
8000	67	100	134	167	201	234	268	301								
9000	75	113	151	188	226	264	301									
10000	84	126	167	209	251	293										

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb003		
Density Lb. Per Cu Ft.		60													Figures in body of chart = mm of door opening		
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																	
500															27	29	31
525															26	28	30
550															25	27	30
575															26	29	31
600															25	28	30
625															26	29	31
650															27	30	32
675															28	31	33
700															29	32	34
750															26	29	31
800															28	31	33
850															26	29	31
900															28	31	33
950															29	33	36
1000															27	31	35
1050															28	32	36
1100															25	30	34
1150															26	31	35
1200															28	32	37
1250															29	34	38
1300															30	35	40
1350															26	31	36
1400															27	32	38
1450															28	33	39
1500															29	35	40
1550															30	36	42
1600															31	37	43
1650															25	32	38
1700															26	33	39
1800															28	35	41
1900															29	36	44
2000															31	38	46
2500															29	38	48
3000															35	48	58
3500	27	40	54	67	81	94	107	121	134	148	161	175	188	201	215	228	
4000	31	46	61	77	92	107	123	138	154	169	184	200	215	230	246	261	
5000	38	58	77	96	115	134	154	173	192	211	230	249	269	288	307	326	
6000	46	69	92	115	138	161	184	207	230	253	276	299					
7000	54	81	107	134	161	188	215	242	269	296							
8000	61	92	123	154	184	215	246	276	307								
9000	69	104	138	173	207	242	276	311									
10000	77	115	154	192	230	269	307										

For Use with **TRANSPREAD** Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb003	
Density Lb. Per Cu Ft.		65													Figures in body of chart = mm of door opening	
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
500															27	28
525														26	28	30
550													25	27	29	31
575													26	29	31	33
600												26	28	30	32	34
625												27	29	31	33	35
650										25	28	30	32	35	37	
675										26	29	31	33	36	38	
700										27	30	32	35	37	40	
750									27	29	32	35	37	40	43	
800								26	28	31	34	37	40	43	45	
850								27	30	33	36	39	42	45	48	
900							26	29	32	35	38	41	45	48	51	
950							27	30	34	37	40	44	47	50	54	
1000							28	32	35	39	43	46	50	53	57	
1050						26	30	33	37	41	45	48	52	56	60	
1100						27	31	35	39	43	47	51	55	58	62	
1150						29	33	37	41	45	49	53	57	61	65	
1200					26	30	34	38	43	47	51	55	60	64	68	
1250					27	31	35	40	44	49	53	58	62	66	71	
1300					28	32	37	41	46	51	55	60	64	69	74	
1350					29	33	38	43	48	53	57	62	67	72	77	
1400					30	35	40	45	50	55	60	64	69	74	79	
1450				26	31	36	41	46	51	57	62	67	72	77	82	
1500				27	32	37	43	48	53	58	64	69	74	80	85	
1550				27	33	38	44	49	55	60	66	71	77	82	88	
1600				28	34	40	45	51	57	62	68	74	79	85	91	
1650				29	35	41	47	53	58	64	70	76	82	88	94	
1700				30	36	42	48	54	60	66	72	78	84	90	96	
1800			26	32	38	45	51	57	64	70	77	83	89	96	102	
1900			27	34	40	47	54	61	67	74	81	87	94	101	108	
2000			28	35	43	50	57	64	71	78	85	92	99	106	113	
2500		27	35	44	53	62	71	80	89	97	106	115	124	133	142	
3000		32	43	53	64	74	85	96	106	117	128	138	149	159	170	
3500		37	50	62	74	87	99	112	124	136	149	161	174	186	198	
4000	28	43	57	71	85	99	113	128	142	156	170	184	198	213	227	
5000	35	53	71	89	106	124	142	159	177	195	213	230	248	266	283	
6000	43	64	85	106	128	149	170	191	213	234	255	276	298	319		
7000	50	74	99	124	149	174	198	223	248	273	298					
8000	57	85	113	142	170	198	227	255	283	312						
9000	64	96	128	159	191	223	255	287	319							
10000	71	106	142	177	213	248	283	319								

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb003	
Density Lb. Per Cu Ft.		70													Figures in body of chart = mm of door opening	
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
500																26
525																28
550															25	27
575															26	28
600															26	28
625															27	29
650															27	29
675															27	29
700															27	29
750															25	28
800															26	28
850															27	30
900															27	30
950															27	30
1000															26	30
1050															28	31
1100															25	29
1150															26	30
1200															28	31
1250															29	33
1300															26	30
1350															27	31
1400															28	32
1450															29	33
1500															30	35
1550															25	31
1600															26	32
1650															27	33
1700															28	34
1800															30	36
1900															31	37
2000															33	39
2500															33	41
3000															30	39
3500															35	46
4000	26	39	53	66	79	92	105	118	132	148	164	181	197	214	230	247
5000	33	49	66	82	99	115	132	148	164	181	197	214	230	247	263	283
6000	39	59	79	99	118	138	158	178	197	217	237	257	276	296		
7000	46	69	92	115	138	161	184	207	230	253	276	299				
8000	53	79	105	132	158	184	211	237	263	289	316					
9000	59	89	118	148	178	207	237	266	296							
10000	66	99	132	164	197	230	263	296								

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb003							
Density Lb. Per Cu Ft.		75													Figures in body of chart = mm of door opening							
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32						
Rate																						
500																26						
525																27						
550															25	27						
575															26	28						
600														26	28	29						
625														27	29	31						
650													26	28	30	32						
675													27	29	31	33						
700												26	28	30	32	34						
750										25	28	30	32	35	37							
800										27	29	32	34	37	39							
850										26	29	31	34	37	39	42						
900										28	30	33	36	39	41	44						
950										29	32	35	38	41	44	47						
1000										28	31	34	37	40	43	46	49					
1050								26	29	32	35	39	42	45	48	52						
1100								27	30	34	37	41	44	47	51	54						
1150								28	32	35	39	42	46	49	53	56						
1200								26	29	33	37	41	44	48	52	55	59					
1250								27	31	35	38	42	46	50	54	58	61					
1300								28	32	36	40	44	48	52	56	60	64					
1350								29	33	37	41	46	50	54	58	62	66					
1400								26	30	34	39	43	47	52	56	60	64	69				
1450								27	31	36	40	45	49	53	58	62	67	71				
1500								28	32	37	41	46	51	55	60	64	69	74				
1550								29	33	38	43	48	52	57	62	67	71	76				
1600								29	34	39	44	49	54	59	64	69	74	79				
1650								25	30	35	41	46	51	56	61	66	71	76	81			
1700								26	31	37	42	47	52	57	63	68	73	78	84			
1800								28	33	39	44	50	55	61	66	72	77	83	88			
1900								29	35	41	47	52	58	64	70	76	82	87	93			
2000								31	37	43	49	55	61	68	74	80	86	92	98			
2500								31	37	43	49	55	61	68	74	80	86	92	98			
3000								38	46	54	61	69	77	84	92	100	107	115	123			
3500								32	43	54	64	75	86	97	107	118	129	140	150	161	172	
4000								37	49	61	74	86	98	111	123	135	147	160	172	184	196	
5000								31	46	61	77	92	107	123	138	154	169	184	200	215	230	246
6000								37	55	74	92	111	129	147	166	184	203	221	239	258	276	295
7000								43	64	86	107	129	150	172	193	215	236	258	279	301		
8000								49	74	98	123	147	172	196	221	246	270	295	319			
9000								55	83	111	138	166	193	221	249	276	304					
10000								61	92	123	154	184	215	246	276	307						

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb003																
Density Lb. Per Cu Ft.		80													Figures in body of chart = mm of door opening																
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32															
Rate																															
500																															
525																															
550																25															
575																26															
600																26	28														
625																27	29														
650																26	28	30	32												
675																27	29	31	33												
700																26	28	30	32	34											
750																25	28	30	32	35	37										
800																27	29	32	34	37	39										
850																27	29	32	34	37	39										
900																26	28	31	34	36	39	41									
950																27	30	33	36	38	41	44									
1000																26	29	32	35	37	40	43	46								
1050																27	30	33	36	39	42	45	48								
1100																25	28	32	35	38	41	44	47	51							
1150																26	30	33	36	40	43	46	50	53							
1200																28	31	35	38	41	45	48	52	55							
1250																25	29	32	36	40	43	47	50	54	58						
1300																26	30	34	37	41	45	49	52	56	60						
1350																27	31	35	39	43	47	51	54	58	62	66					
1400																28	32	36	40	44	48	52	56	60	64	69					
1450																25	29	33	38	42	46	50	54	58	63	67					
1500																26	30	35	39	43	47	52	56	60	65	69					
1550																27	31	36	40	45	49	54	58	62	67	71					
1600																28	32	37	41	46	51	55	60	64	69	74					
1650																28	33	38	43	47	52	57	62	66	71	76					
1700																29	34	39	44	49	54	59	64	69	73	78					
1800																26	31	36	41	47	52	57	62	67	73	78	83				
1900																27	33	38	44	49	55	60	66	71	77	82	87				
2000																29	35	40	46	52	58	63	69	75	81	86	92				
2500																29	36	43	50	58	65	72	79	86	94	101	108	115			
3000																26	35	43	52	60	69	78	86	95	104	112	121	130	138		
3500																30	40	50	60	71	81	91	101	111	121	131	141	151	161		
4000																35	46	58	69	81	92	104	115	127	138	150	161	173	184	196	
5000																29	43	58	72	86	101	115	130	144	158	173	187	201	216	230	246
6000																35	52	69	86	104	121	138	155	173	190	207	225	242	259	276	295
7000																40	60	81	101	121	141	161	181	201	222	242	262	282	302		
8000																46	69	92	115	138	161	184	207	230	253	276	299				
9000																52	78	104	130	155	181	207	233	259	285	311					
10000																58	86	115	144	173	201	230	259	288	317						

For Use with [TRANSPREAD](#) Density Meter ..gb003 Narrow, Standard Jockey... Accuracy of final settings operators responsibility based on use
 Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear	RATE CHART LB. PER ACRE													gb003	
Density Lb. Per Cu Ft.	90													Figures in body of chart = mm of door opening	
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate															
500															
525															
550															
575															
600															
625															26
650															27
675														26	28
700													25	27	29
750													27	29	31
800												27	29	31	33
850										26	28	30	32	33	35
900										25	28	30	32	35	37
950										27	29	32	34	36	39
1000									26	28	31	33	36	38	41
1050									27	30	32	35	38	40	43
1100								25	28	31	34	37	39	42	45
1150								26	29	32	35	38	41	44	47
1200								28	31	34	37	40	43	46	49
1250						26	29	32	35	38	42	45	48	51	
1300						27	30	33	37	40	43	47	50	53	
1350						28	31	35	38	41	45	48	52	55	
1400					25	29	32	36	39	43	47	50	54	57	
1450					26	30	33	37	41	45	48	52	56	59	
1500					27	31	35	38	42	46	50	54	58	61	
1550					28	32	36	40	44	48	52	56	59	63	
1600					29	33	37	41	45	49	53	57	61	65	
1650					25	30	34	38	42	46	51	55	59	63	68
1700					26	30	35	39	43	48	52	57	61	65	70
1800					28	32	37	41	46	51	55	60	64	69	74
1900					29	34	39	44	49	53	58	63	68	73	78
2000					26	31	36	41	46	51	56	61	67	72	77
2500			26	32	38	45	51	58	64	70	77	83	90	96	102
3000			31	38	46	54	61	69	77	84	92	100	107	115	123
3500		27	36	45	54	63	72	81	90	99	107	116	125	134	143
4000		31	41	51	61	72	82	92	102	113	123	133	143	154	164
5000	26	38	51	64	77	90	102	115	128	141	154	166	179	192	205
6000	31	46	61	77	92	107	123	138	154	169	184	200	215	230	246
7000	36	54	72	90	107	125	143	161	179	197	215	233	251	269	287
8000	41	61	82	102	123	143	164	184	205	225	246	266	287	307	
9000	46	69	92	115	138	161	184	207	230	253	276	299			
10000	51	77	102	128	154	179	205	230	256	281	307				

Gear Box...High. Gear	RATE CHART LB. PER ACRE													gb003	
Density Lb. Per Cu Ft.	100													Figures in body of chart = mm of door opening	
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate															
500															
525															
550															
575															
600															
625															
650															
675															
700															26
750															28
800															29
850														25	27
900														27	29
950														28	31
1000														25	28
1050														27	29
1100														28	30
1150														25	28
1200														29	32
1250														30	33
1300														26	29
1350														27	30
1400														28	31
1450														26	29
1500														27	30
1550														28	31
1600														29	32
1650														26	29
1700														27	30
1800														28	31
1900														26	29
2000														27	30
2500														28	31
3000														29	32
3500														26	29
4000														27	30
5000	28	35	46	58	69	81	92	104	115	127	138	150	161	173	184
6000	32	41	55	69	83	97	111	124	138	152	166	180	193	207	221
7000	36	48	64	81	97	113	129	145	161	177	193	210	226	242	258
8000	41	55	74	92	111	129	147	166	184	203	221	239	258	276	295
9000	46	62	83	104	124	145	166	187	207	228	249	269	290	311	
10000	51	69	92	115	138	161	184	207	230	253	276	299			