

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		45 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20								26	28	31	35	39	44	52	52
30								39	43	46	52	59	65	65	78
40								52	57	61	70	78	87	87	105
50	27	33	38	44	49	55	60	65	71	76	87	98	109	109	131
60	33	39	46	52	59	65	72	78	85	92	105	118	131	131	157
70	38	46	53	61	69	76	84	92	99	107	122	137	153	153	183
80	44	52	61	70	78	87	96	105	113	122	140	157	174	174	209
90	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
100	55	65	76	87	98	109	120	131	142	153	174	196	218	218	262
110	60	72	84	96	108	120	132	144	156	168	192	216	240	240	288
120	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
130	71	85	99	113	128	142	156	170	184	198	227	255	283	283	
140	76	92	107	122	137	153	168	183	198	214	244	275			
150	82	98	114	131	147	164	180	196	213	229	262	294			
160	87	105	122	140	157	174	192	209	227	244	279				
170	93	111	130	148	167	185	204	222	241	259	296				
180	98	118	137	157	177	196	216	235	255	275					
190	104	124	145	166	186	207	228	249	269	290					
200	109	131	153	174	196	218	240	262	283						
210	114	137	160	183	206	229	252	275	298						
220	120	144	168	192	216	240	264	288							
230	125	150	175	201	226	251	276								
240	131	157	183	209	235	262	288								
250	136	164	191	218	245	273	300								
260	142	170	198	227	255	283									
270	147	177	206	235	265	294									
280	153	183	214	244	275										
290	158	190	221	253	284										
300	164	196	229	262	294										
320	174	209	244	279											
340	185	222	259	296											
360	196	235	275												
380	207	249	290												
400	218	262													
425	232	278													
450	245	294													
475	259														
500	273														
525	286														
550	300														
575															
600															

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		50 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															
40															
50															
60	29	35	41	47	53	59	65	71	77	82	94	106	118	118	141
70	34	41	48	55	62	69	76	82	89	96	110	124	137	137	165
80	39	47	55	63	71	78	86	94	102	110	126	141	157	157	188
90	44	53	62	71	79	88	97	106	115	124	141	159	177	177	212
100	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
110	54	65	76	86	97	108	119	129	140	151	173	194	216	216	259
120	59	71	82	94	106	118	129	141	153	165	188	212	235	235	283
130	64	77	89	102	115	128	140	153	166	179	204	230	255	255	
140	69	82	96	110	124	137	151	165	179	192	220	247	275	275	
150	74	88	103	118	132	147	162	177	191	206	235	265	294	294	
160	78	94	110	126	141	157	173	188	204	220	251	283			
170	83	100	117	133	150	167	183	200	217	233	267				
180	88	106	124	141	159	177	194	212	230	247	283				
190	93	112	130	149	168	186	205	224	242	261	298				
200	98	118	137	157	177	196	216	235	255	275					
210	103	124	144	165	185	206	227	247	268	288					
220	108	129	151	173	194	216	237	259	281						
230	113	135	158	181	203	226	248	271	293						
240	118	141	165	188	212	235	259	283							
250	123	147	172	196	221	245	270	294							
260	128	153	179	204	230	255	281								
270	132	159	185	212	238	265	291								
280	137	165	192	220	247	275									
290	142	171	199	228	256	284									
300	147	177	206	235	265	294									
320	157	188	220	251	283										
340	167	200	233	267											
360	177	212	247	283											
380	186	224	261	298											
400	196	235	275												
425	208	250	292												
450	221	265													
475	233	280													
500	245	294													
525	258														
550	270														
575	282														
600	294														

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		55 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20											29	32	36	43	43
30											43	48	54	54	64
40											57	64	71	71	86
50		27	31	36	40	45	49	54	58	62	71	80	89	89	107
60	27	32	37	43	48	54	59	64	70	75	86	96	107	107	128
70	31	37	44	50	56	62	69	75	81	87	100	112	125	125	150
80	36	43	50	57	64	71	78	86	93	100	114	128	143	143	171
90	40	48	56	64	72	80	88	96	104	112	128	144	161	161	193
100	45	54	62	71	80	89	98	107	116	125	143	161	178	178	214
110	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
120	54	64	75	86	96	107	118	128	139	150	171	193	214	214	257
130	58	70	81	93	104	116	128	139	151	162	185	209	232	232	278
140	62	75	87	100	112	125	137	150	162	175	200	225	250	250	300
150	67	80	94	107	120	134	147	161	174	187	214	241	268	268	
160	71	86	100	114	128	143	157	171	185	200	228	257	285	285	
170	76	91	106	121	136	152	167	182	197	212	243	273			
180	80	96	112	128	144	161	177	193	209	225	257	289			
190	85	102	119	136	153	169	186	203	220	237	271				
200	89	107	125	143	161	178	196	214	232	250	285				
210	94	112	131	150	169	187	206	225	243	262	300				
220	98	118	137	157	177	196	216	235	255	275					
230	103	123	144	164	185	205	226	246	267	287					
240	107	128	150	171	193	214	235	257	278	300					
250	111	134	156	178	201	223	245	268	290						
260	116	139	162	185	209	232	255	278							
270	120	144	169	193	217	241	265	289							
280	125	150	175	200	225	250	275	300							
290	129	155	181	207	233	259	284								
300	134	161	187	214	241	268	294								
320	143	171	200	228	257	285									
340	152	182	212	243	273										
360	161	193	225	257	289										
380	169	203	237	271											
400	178	214	250	285											
425	190	227	265												
450	201	241	281												
475	212	254	297												
500	223	268													
525	234	281													
550	245	294													
575	256														
600	268														

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		60 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															
40											26	29	33	36	39
50											33	37	41	45	49
60											44	49	54	59	64
70											57	63	69	74	80
80											71	78	85	92	103
90											86	93	101	109	118
100											101	109	117	125	134
110											116	125	133	141	149
120											131	140	148	156	164
130											146	155	163	171	179
140											161	170	178	186	194
150											176	185	193	201	209
160											191	199	207	215	223
170											206	214	222	230	238
180											221	229	237	245	253
190											236	244	252	260	268
200											251	259	267	275	283
210											266	274	282	290	298
220											281	289	297		
230											296	304			
240											311	319			
250											326	334			
260											341	349			
270											356	364			
280											371	379			
290											386	394			
300											401	409			
320											416	424			
340											431	439			
360											446	454			
380											461	469			
400											476	484			
425											491	499			
450											506	514			
475											521	529			
500											536	544			
525											551	559			
550											566	574			
575											581	589			
600											596	604			

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		65 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20													27	30	36
30								27	29	32	36	41	45	45	54
40								36	39	42	48	54	60	60	72
50					27	30	33	36	49	53	60	68	75	75	91
60		27	32	36	41	45	50	54	59	63	72	81	91	91	109
70	26	32	37	42	48	53	58	63	69	74	85	95	106	106	127
80	30	36	42	48	54	60	66	72	78	85	97	109	121	121	145
90	34	41	48	54	61	68	75	81	88	95	109	122	136	136	163
100	38	45	53	60	68	75	83	91	98	106	121	136	151	151	181
110	42	50	58	66	75	83	91	100	108	116	133	149	166	166	199
120	45	54	63	72	81	91	100	109	118	127	145	163	181	181	217
130	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
140	53	63	74	85	95	106	116	127	137	148	169	190	211	211	254
150	57	68	79	91	102	113	125	136	147	158	181	204	226	226	272
160	60	72	85	97	109	121	133	145	157	169	193	217	241	241	290
170	64	77	90	103	115	128	141	154	167	180	205	231	257	257	
180	68	81	95	109	122	136	149	163	177	190	217	244	272	272	
190	72	86	100	115	129	143	158	172	186	201	229	258	287	287	
200	75	91	106	121	136	151	166	181	196	211	241	272			
210	79	95	111	127	143	158	174	190	206	222	254	285			
220	83	100	116	133	149	166	183	199	216	232	266	299			
230	87	104	121	139	156	174	191	208	226	243	278				
240	91	109	127	145	163	181	199	217	235	254	290				
250	94	113	132	151	170	189	208	226	245	264					
260	98	118	137	157	177	196	216	235	255	275					
270	102	122	143	163	183	204	224	244	265	285					
280	106	127	148	169	190	211	232	254	275	296					
290	109	131	153	175	197	219	241	263	284						
300	113	136	158	181	204	226	249	272	294						
320	121	145	169	193	217	241	266	290							
340	128	154	180	205	231	257	282								
360	136	163	190	217	244	272	299								
380	143	172	201	229	258	287									
400	151	181	211	241	272										
425	160	192	224	257	289										
450	170	204	238	272											
475	179	215	251	287											
500	189	226	264												
525	198	238	277												
550	208	249	291												
575	217	260													
600	226	272													

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		70 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30													25	28	34
40													34	36	42
50											25	28	31	34	36
60											34	38	42	46	46
70											44	49	54	59	64
80											50	56	62	67	73
90											57	63	69	76	82
100											63	70	77	84	91
110											69	77	85	92	100
120											76	84	92	101	109
130											82	91	100	109	118
140											88	98	108	118	128
150											95	105	116	126	137
160											101	112	123	135	146
170											107	119	131	143	155
180											114	126	139	151	164
190											120	133	146	160	173
200											127	141	154	168	182
210											133	147	162	177	191
220											139	154	170	185	200
230											145	161	177	193	210
240											151	168	185	202	219
250											158	175	193	210	228
260											164	182	200	219	237
270											170	189	208	227	246
280											177	196	216	235	255
290											183	203	224	244	264
300											189	210	231	252	273
320											195	217	239	261	284
340											201	224	247	269	291
360											207	231	255	277	
380											213	240	266	293	
400											220	250	280		
425											227	258	298		
450											234	266	300		
475											241	274			
500											248	282			
525											255	290			
550											262	298			
575											270				
600											277				

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		75 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20														26	31
30									26	27	31	35	39	39	47
40									34	37	42	47	52	52	63
50				26	29	33	36	39	43	46	52	59	65	65	78
60			27	31	35	39	43	47	51	55	63	71	78	78	94
70		27	32	37	41	46	50	55	60	64	73	82	92	92	110
80	26	31	37	42	47	52	58	63	68	73	84	94	105	105	126
90	29	35	41	47	53	59	65	71	77	82	94	106	118	118	141
100	33	39	46	52	59	65	72	78	85	92	105	118	131	131	157
110	36	43	50	58	65	72	79	86	94	101	115	129	144	144	173
120	39	47	55	63	71	78	86	94	102	110	126	141	157	157	188
130	43	51	60	68	77	85	94	102	111	119	136	153	170	170	204
140	46	55	64	73	82	92	101	110	119	128	146	165	183	183	220
150	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
160	52	63	73	84	94	105	115	126	136	146	167	188	209	209	251
170	56	67	78	89	100	111	122	133	145	156	178	200	222	222	267
180	59	71	82	94	106	118	129	141	153	165	188	212	235	235	283
190	62	75	87	99	112	124	137	149	162	174	199	224	249	249	298
200	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
210	69	82	96	110	124	137	151	165	179	192	220	247	275	275	
220	72	86	101	115	129	144	158	173	187	201	230	259	288	288	
230	75	90	105	120	135	150	165	181	196	211	241	271			
240	78	94	110	126	141	157	173	188	204	220	251	283			
250	82	98	114	131	147	164	180	196	213	229	262	294			
260	85	102	119	136	153	170	187	204	221	238	272				
270	88	106	124	141	159	177	194	212	230	247	283				
280	92	110	128	146	165	183	201	220	238	256	293				
290	95	114	133	152	171	190	209	228	247	266					
300	98	118	137	157	177	196	216	235	255	275					
320	105	126	146	167	188	209	230	251	272	293					
340	111	133	156	178	200	222	245	267	289						
360	118	141	165	188	212	235	259	283							
380	124	149	174	199	224	249	273	298							
400	131	157	183	209	235	262	288								
425	139	167	195	222	250	278									
450	147	177	206	235	265	294									
475	155	186	217	249	280										
500	164	196	229	262	294										
525	172	206	240	275											
550	180	216	252	288											
575	188	226	263												
600	196	235	275												

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		80 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															29
30														26	29
40														32	34
50														40	43
60														48	52
70														56	60
80														64	69
90														72	77
100														80	86
110														88	94
120														96	103
130														104	112
140														112	120
150														120	129
160														128	137
170														136	146
180														143	155
190														151	163
200														159	172
210														167	180
220														175	189
230														183	197
240														191	206
250														199	215
260														207	223
270														215	232
280														223	240
290														231	249
300														239	258
320														247	266
340														255	275
360														263	283
380														271	292
400														279	299
425															
450															
475															
500															
525															
550															
575															
600															

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		90 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20														26	26
30												26	29	33	39
40								26	28	31	35	39	44	44	52
50						27	30	33	35	38	44	49	55	55	65
60				26	29	33	36	39	43	46	52	59	65	65	78
70			27	31	34	38	42	46	50	53	61	69	76	76	92
80		26	31	35	39	44	48	52	57	61	70	78	87	87	105
90		29	34	39	44	49	54	59	64	69	78	88	98	98	118
100	27	33	38	44	49	55	60	65	71	76	87	98	109	109	131
110	30	36	42	48	54	60	66	72	78	84	96	108	120	120	144
120	33	39	46	52	59	65	72	78	85	92	105	118	131	131	157
130	35	43	50	57	64	71	78	85	92	99	113	128	142	142	170
140	38	46	53	61	69	76	84	92	99	107	122	137	153	153	183
150	41	49	57	65	74	82	90	98	106	114	131	147	164	164	196
160	44	52	61	70	78	87	96	105	113	122	140	157	174	174	209
170	46	56	65	74	83	93	102	111	120	130	148	167	185	185	222
180	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
190	52	62	72	83	93	104	114	124	135	145	166	186	207	207	249
200	55	65	76	87	98	109	120	131	142	153	174	196	218	218	262
210	57	69	80	92	103	114	126	137	149	160	183	206	229	229	275
220	60	72	84	96	108	120	132	144	156	168	192	216	240	240	288
230	63	75	88	100	113	125	138	150	163	175	201	226	251	251	
240	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
250	68	82	95	109	123	136	150	164	177	191	218	245	273	273	
260	71	85	99	113	128	142	156	170	184	198	227	255	283	283	
270	74	88	103	118	132	147	162	177	191	206	235	265	294	294	
280	76	92	107	122	137	153	168	183	198	214	244	275			
290	79	95	111	126	142	158	174	190	205	221	253	284			
300	82	98	114	131	147	164	180	196	213	229	262	294			
320	87	105	122	140	157	174	192	209	227	244	279				
340	93	111	130	148	167	185	204	222	241	259	296				
360	98	118	137	157	177	196	216	235	255	275					
380	104	124	145	166	186	207	228	249	269	290					
400	109	131	153	174	196	218	240	262	283						
425	116	139	162	185	208	232	255	278							
450	123	147	172	196	221	245	270	294							
475	129	155	181	207	233	259	285								
500	136	164	191	218	245	273	300								
525	143	172	200	229	258	286									
550	150	180	210	240	270	300									
575	157	188	219	251	282										
600	164	196	229	262	294										

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		100 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															35
40														26	29
50												27	29	39	47
60											26	29	32	35	59
70										27	31	34	38	41	82
80										27	31	35	39	43	94
90										31	35	40	44	49	106
100		29	34	39	44	49	54	59	64	69	78	88	98	108	118
110	27	32	38	43	49	54	59	65	70	76	86	97	108	108	129
120	29	35	41	47	53	59	65	71	77	82	94	106	118	118	141
130	32	38	45	51	57	64	70	77	83	89	102	115	128	128	153
140	34	41	48	55	62	69	76	82	89	96	110	124	137	137	165
150	37	44	52	59	66	74	81	88	96	103	118	132	147	147	177
160	39	47	55	63	71	78	86	94	102	110	126	141	157	157	188
170	42	50	58	67	75	83	92	100	108	117	133	150	167	167	200
180	44	53	62	71	79	88	97	106	115	124	141	159	177	177	212
190	47	56	65	75	84	93	103	112	121	130	149	168	186	186	224
200	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
210	52	62	72	82	93	103	113	124	134	144	165	185	206	206	247
220	54	65	76	86	97	108	119	129	140	151	173	194	216	216	259
230	56	68	79	90	102	113	124	135	147	158	181	203	226	226	271
240	59	71	82	94	106	118	129	141	153	165	188	212	235	235	283
250	61	74	86	98	110	123	135	147	159	172	196	221	245	245	294
260	64	77	89	102	115	128	140	153	166	179	204	230	255	255	
270	66	79	93	106	119	132	146	159	172	185	212	238	265	265	
280	69	82	96	110	124	137	151	165	179	192	220	247	275	275	
290	71	85	100	114	128	142	156	171	185	199	228	256	284	284	
300	74	88	103	118	132	147	162	177	191	206	235	265	294	294	
320	78	94	110	126	141	157	173	188	204	220	251	283			
340	83	100	117	133	150	167	183	200	217	233	267				
360	88	106	124	141	159	177	194	212	230	247	283				
380	93	112	130	149	168	186	205	224	242	261	298				
400	98	118	137	157	177	196	216	235	255	275					
425	104	125	146	167	188	208	229	250	271	292					
450	110	132	155	177	199	221	243	265	287						
475	116	140	163	186	210	233	256	280							
500	123	147	172	196	221	245	270	294							
525	129	155	180	206	232	258	283								
550	135	162	189	216	243	270	297								
575	141	169	197	226	254	282									
600	147	177	206	235	265	294									



For Use with [TRANSPREAD](#) Density Meter ..gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		45 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	58	70	81	93	105	116	128	140	151	163	186	209	233	279	279
225	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
250	73	87	102	116	131	145	160	174	189	203	233	262	291	291	
275	80	96	112	128	144	160	176	192	208	224	256	288			
300	87	105	122	140	157	174	192	209	227	244	279				
325	94	113	132	151	170	189	208	227	246	265					
350	102	122	142	163	183	203	224	244	265	285					
375	109	131	153	174	196	218	240	262	283						
400	116	140	163	186	209	233	256	279							
425	124	148	173	198	222	247	272	296							
450	131	157	183	209	235	262	288								
475	138	166	193	221	249	276									
500	145	174	203	233	262	291									
525	153	183	214	244	275										
550	160	192	224	256	288										
575	167	201	234	267											
600	174	209	244	279											
625	182	218	254	291											
650	189	227	265												
675	196	235	275												
700	203	244	285												
750	218	262													
800	233	279													
850	247	296													
900	262														
950	276														
1000	291														
1050															
1100															
1150															
1200															
1250															
1300															
1350															
1400															
1450															
1500															
1550															
1600															
1650															
1700															
1800															

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		50 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	52	63	73	84	94	105	115	126	136	146	167	188	209	251	251
225	59	71	82	94	106	118	129	141	153	165	188	212	235	235	283
250	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
275	72	86	101	115	129	144	158	173	187	201	230	259	288	288	
300	78	94	110	126	141	157	173	188	204	220	251	283			
325	85	102	119	136	153	170	187	204	221	238	272				
350	92	110	128	146	165	183	201	220	238	256	293				
375	98	118	137	157	177	196	216	235	255	275					
400	105	126	146	167	188	209	230	251	272	293					
425	111	133	156	178	200	222	245	267	289						
450	118	141	165	188	212	235	259	283							
475	124	149	174	199	224	249	273	298							
500	131	157	183	209	235	262	288								
525	137	165	192	220	247	275									
550	144	173	201	230	259	288									
575	150	181	211	241	271										
600	157	188	220	251	283										
625	164	196	229	262	294										
650	170	204	238	272											
675	177	212	247	283											
700	183	220	256	293											
750	196	235	275												
800	209	251	293												
850	222	267													
900	235	283													
950	249	298													
1000	262														
1050	275														
1100	288														
1150															
1200															
1250															
1300															
1350															
1400															
1450															
1500															
1550															
1600															
1650															
1700															
1800															

For Use with [TRANSPREAD](#) Density Meter ..gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		55														
Figures in body of chart = mm of door opening																
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	
Rate																
200	48	57	67	76	86	95	105	114	124	133	152	171	190	228	228	
225	54	64	75	86	96	107	118	128	139	150	171	193	214	214	257	
250	59	71	83	95	107	119	131	143	155	166	190	214	238	238	285	
275	65	78	92	105	118	131	144	157	170	183	209	235	262	262		
300	71	86	100	114	128	143	157	171	185	200	228	257	285	285		
325	77	93	108	124	139	155	170	185	201	216	247	278				
350	83	100	117	133	150	166	183	200	216	233	266	300				
375	89	107	125	143	161	178	196	214	232	250	285					
400	95	114	133	152	171	190	209	228	247	266						
425	101	121	142	162	182	202	222	243	263	283						
450	107	128	150	171	193	214	235	257	278	300						
475	113	136	158	181	203	226	249	271	294							
500	119	143	166	190	214	238	262	285								
525	125	150	175	200	225	250	275	300								
550	131	157	183	209	235	262	288									
575	137	164	191	219	246	273										
600	143	171	200	228	257	285										
625	149	178	208	238	268	297										
650	155	185	216	247	278											
675	161	193	225	257	289											
700	166	200	233	266	300											
750	178	214	250	285												
800	190	228	266													
850	202	243	283													
900	214	257	300													
950	226	271														
1000	238	285														
1050	250	300														
1100	262															
1150	273															
1200	285															
1250	297															
1300																
1350																
1400																
1450																
1500																
1550																
1600																
1650																
1700																
1800																

Gear Box...Med. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		60														
Figures in body of chart = mm of door opening																
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	
Rate																
200	44	52	61	70	78	87	96	105	113	122	140	157	174	192	209	227
225	49	59	69	78	88	98	108	118	128	137	157	177	196	216	235	254
250	55	65	76	87	98	109	120	131	142	153	174	196	218	240	262	283
275	60	72	84	96	108	120	132	144	156	168	192	216	240	262	283	
300	65	78	92	105	118	131	144	157	170	183	209	235	262	283		
325	71	85	99	113	128	142	156	170	184	198	227	255	283			
350	76	92	107	122	137	153	168	183	198	214	244	275				
375	82	98	114	131	147	164	180	196	213	229	262	294				
400	87	105	122	140	157	174	192	209	227	244	279					
425	93	111	130	148	167	185	204	222	241	259	296					
450	98	118	137	157	177	196	216	235	255	275						
475	104	124	145	166	186	207	228	249	269	290						
500	109	131	153	174	196	218	240	262	283							
525	114	137	160	183	206	229	252	275	298							
550	120	144	168	192	216	240	264	288								
575	125	150	175	201	226	251	276									
600	131	157	183	209	235	262	288									
625	136	164	191	218	245	273	300									
650	142	170	198	227	255	283										
675	147	177	206	235	265	294										
700	153	183	214	244	275											
750	164	196	229	262	294											
800	174	209	244	279												
850	185	222	259	296												
900	196	235	275													
950	207	249	290													
1000	218	262														
1050	229	275														
1100	240	288														
1150	251															
1200	262															
1250	273															
1300	283															
1350	294															
1400																
1450																
1500																
1550																
1600																
1650																
1700																
1800																

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		65 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	40	48	56	64	72	80	89	97	105	113	129	145	161	193	193
225	45	54	63	72	81	91	100	109	118	127	145	163	181	181	217
250	50	60	70	80	91	101	111	121	131	141	161	181	201	201	241
275	55	66	77	89	100	111	122	133	144	155	177	199	221	221	266
300	60	72	85	97	109	121	133	145	157	169	193	217	241	241	290
325	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
350	70	85	99	113	127	141	155	169	183	197	225	254	282	282	
375	75	91	106	121	136	151	166	181	196	211	241	272			
400	80	97	113	129	145	161	177	193	209	225	258	290			
425	86	103	120	137	154	171	188	205	222	239	274				
450	91	109	127	145	163	181	199	217	235	254	290				
475	96	115	134	153	172	191	210	229	249	268					
500	101	121	141	161	181	201	221	241	262	282					
525	106	127	148	169	190	211	232	254	275	296					
550	111	133	155	177	199	221	243	266	288						
575	116	139	162	185	208	231	255	278							
600	121	145	169	193	217	241	266	290							
625	126	151	176	201	226	252	277								
650	131	157	183	209	235	262	288								
675	136	163	190	217	244	272	299								
700	141	169	197	225	254	282									
750	151	181	211	241	272										
800	161	193	225	258	290										
850	171	205	239	274											
900	181	217	254	290											
950	191	229	268												
1000	201	241	282												
1050	211	254	296												
1100	221	266													
1150	231	278													
1200	241	290													
1250	252														
1300	262														
1350	272														
1400	282														
1450	292														
1500															
1550															
1600															
1650															
1700															
1800															

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		70 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	37	45	52	60	67	75	82	90	97	105	120	135	149	179	179
225	42	50	59	67	76	84	92	101	109	118	135	151	168	168	202
250	47	56	65	75	84	93	103	112	121	131	149	168	187	187	224
275	51	62	72	82	92	103	113	123	134	144	164	185	206	206	247
300	56	67	78	90	101	112	123	135	146	157	179	202	224	224	269
325	61	73	85	97	109	121	134	146	158	170	194	219	243	243	291
350	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
375	70	84	98	112	126	140	154	168	182	196	224	252	280	280	
400	75	90	105	120	135	149	164	179	194	209	239	269	299	299	
425	79	95	111	127	143	159	175	191	206	222	254	286			
450	84	101	118	135	151	168	185	202	219	235	269				
475	89	107	124	142	160	178	195	213	231	249	284				
500	93	112	131	149	168	187	206	224	243	262	299				
525	98	118	137	157	177	196	216	235	255	275					
550	103	123	144	164	185	206	226	247	267	288					
575	107	129	150	172	193	215	236	258	279						
600	112	135	157	179	202	224	247	269	291						
625	117	140	164	187	210	234	257	280							
650	121	146	170	194	219	243	267	291							
675	126	151	177	202	227	252	277								
700	131	157	183	209	235	262	288								
750	140	168	196	224	252	280									
800	149	179	209	239	269	299									
850	159	191	222	254	286										
900	168	202	235	269											
950	178	213	249	284											
1000	187	224	262	299											
1050	196	235	275												
1100	206	247	288												
1150	215	258													
1200	224	269													
1250	234	280													
1300	243	291													
1350	252														
1400	262														
1450	271														
1500	280														
1550	290														
1600	299														
1650															
1700															
1800															



For Use with **TRANSPREAD** Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		75 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	35	42	49	56	63	70	77	84	91	98	112	126	140	167	167
225	39	47	55	63	71	78	86	94	102	110	126	141	157	157	188
250	44	52	61	70	78	87	96	105	113	122	140	157	174	174	209
275	48	58	67	77	86	96	106	115	125	134	153	173	192	192	230
300	52	63	73	84	94	105	115	126	136	146	167	188	209	209	251
325	57	68	79	91	102	113	125	136	147	159	181	204	227	227	272
350	61	73	85	98	110	122	134	146	159	171	195	220	244	244	293
375	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
400	70	84	98	112	126	140	153	167	181	195	223	251	279	279	
425	74	89	104	119	133	148	163	178	193	208	237	267	296	296	
450	78	94	110	126	141	157	173	188	204	220	251	283			
475	83	99	116	133	149	166	182	199	215	232	265	298			
500	87	105	122	140	157	174	192	209	227	244	279				
525	92	110	128	146	165	183	201	220	238	256	293				
550	96	115	134	153	173	192	211	230	249	269					
575	100	120	140	160	181	201	221	241	261	281					
600	105	126	146	167	188	209	230	251	272	293					
625	109	131	153	174	196	218	240	262	283						
650	113	136	159	181	204	227	249	272	295						
675	118	141	165	188	212	235	259	283							
700	122	146	171	195	220	244	269	293							
750	131	157	183	209	235	262	288								
800	140	167	195	223	251	279									
850	148	178	208	237	267	296									
900	157	188	220	251	283										
950	166	199	232	265	298										
1000	174	209	244	279											
1050	183	220	256	293											
1100	192	230	269												
1150	201	241	281												
1200	209	251	293												
1250	218	262													
1300	227	272													
1350	235	283													
1400	244	293													
1450	253														
1500	262														
1550	270														
1600	279														
1650	288														
1700	296														
1800															

 
Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density Lb. Per Cu Ft.		80 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	33	39	46	52	59	65	72	78	85	92	105	118	131	157	157
225	37	44	52	59	66	74	81	88	96	103	118	132	147	147	177
250	41	49	57	65	74	82	90	98	106	114	131	147	164	164	196
275	45	54	63	72	81	90	99	108	117	126	144	162	180	180	216
300	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
325	53	64	74	85	96	106	117	128	138	149	170	191	213	213	255
350	57	69	80	92	103	114	126	137	149	160	183	206	229	229	275
375	61	74	86	98	110	123	135	147	159	172	196	221	245	245	294
400	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
425	69	83	97	111	125	139	153	167	181	195	222	250	278	278	
450	74	88	103	118	132	147	162	177	191	206	235	265	294	294	
475	78	93	109	124	140	155	171	186	202	217	249	280			
500	82	98	114	131	147	164	180	196	213	229	262	294			
525	86	103	120	137	155	172	189	206	223	240	275				
550	90	108	126	144	162	180	198	216	234	252	288				
575	94	113	132	150	169	188	207	226	244	263					
600	98	118	137	157	177	196	216	235	255	275					
625	102	123	143	164	184	204	225	245	266	286					
650	106	128	149	170	191	213	234	255	276	298					
675	110	132	155	177	199	221	243	265	287						
700	114	137	160	183	206	229	252	275	298						
750	123	147	172	196	221	245	270	294							
800	131	157	183	209	235	262	288								
850	139	167	195	222	250	278									
900	147	177	206	235	265	294									
950	155	186	217	249	280										
1000	164	196	229	262	294										
1050	172	206	240	275											
1100	180	216	252	288											
1150	188	226	263												
1200	196	235	275												
1250	204	245	286												
1300	213	255	298												
1350	221	265													
1400	229	275													
1450	237	284													
1500	245	294													
1550	253														
1600	262														
1650	270														
1700	278														
1800	294														

For Use with **TRANSPREAD** Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density	Lb. Per Cu Ft.	Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	29	35	41	47	52	58	64	70	76	81	93	105	116	140	140
225	33	39	46	52	59	65	72	78	85	92	105	118	131	131	157
250	36	44	51	58	65	73	80	87	94	102	116	131	145	145	174
275	40	48	56	64	72	80	88	96	104	112	128	144	160	160	192
300	44	52	61	70	78	87	96	105	113	122	140	157	174	174	209
325	47	57	66	76	85	94	104	113	123	132	151	170	189	189	227
350	51	61	71	81	92	102	112	122	132	142	163	183	203	203	244
375	55	65	76	87	98	109	120	131	142	153	174	196	218	218	262
400	58	70	81	93	105	116	128	140	151	163	186	209	233	233	279
425	62	74	86	99	111	124	136	148	161	173	198	222	247	247	296
450	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
475	69	83	97	110	124	138	152	166	179	193	221	249	276	276	
500	73	87	102	116	131	145	160	174	189	203	233	262	291	291	
525	76	92	107	122	137	153	168	183	198	214	244	275			
550	80	96	112	128	144	160	176	192	208	224	256	288			
575	84	100	117	134	150	167	184	201	217	234	267				
600	87	105	122	140	157	174	192	209	227	244	279				
625	91	109	127	145	164	182	200	218	236	254	291				
650	94	113	132	151	170	189	208	227	246	265					
675	98	118	137	157	177	196	216	235	255	275					
700	102	122	142	163	183	203	224	244	265	285					
750	109	131	153	174	196	218	240	262	283						
800	116	140	163	186	209	233	256	279							
850	124	148	173	198	222	247	272	296							
900	131	157	183	209	235	262	288								
950	138	166	193	221	249	276									
1000	145	174	203	233	262	291									
1050	153	183	214	244	275										
1100	160	192	224	256	288										
1150	167	201	234	267											
1200	174	209	244	279											
1250	182	218	254	291											
1300	189	227	265												
1350	196	235	275												
1400	203	244	285												
1450	211	253	295												
1500	218	262													
1550	225	270													
1600	233	279													
1650	240	288													
1700	247	296													
1800	262														

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005, 500													
Density	Lb. Per Cu Ft.	Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	26	31	37	42	47	52	58	63	68	73	84	94	105	126	126
225	29	35	41	47	53	59	65	71	77	82	94	106	118	118	141
250	33	39	46	52	59	65	72	78	85	92	105	118	131	131	157
275	36	43	50	58	65	72	79	86	94	101	115	129	144	144	173
300	39	47	55	63	71	78	86	94	102	110	126	141	157	157	188
325	43	51	60	68	77	85	94	102	111	119	136	153	170	170	204
350	46	55	64	73	82	92	101	110	119	128	146	165	183	183	220
375	49	59	69	78	88	98	108	118	128	137	157	177	196	196	235
400	52	63	73	84	94	105	115	126	136	146	167	188	209	209	251
425	56	67	78	89	100	111	122	133	145	156	178	200	222	222	267
450	59	71	82	94	106	118	129	141	153	165	188	212	235	235	283
475	62	75	87	99	112	124	137	149	162	174	199	224	249	249	298
500	65	78	92	105	118	131	144	157	170	183	209	235	262	262	
525	69	82	96	110	124	137	151	165	179	192	220	247	275	275	
550	72	86	101	115	129	144	158	173	187	201	230	259	288	288	
575	75	90	105	120	135	150	165	181	196	211	241	271			
600	78	94	110	126	141	157	173	188	204	220	251	283			
625	82	98	114	131	147	164	180	196	213	229	262	294			
650	85	102	119	136	153	170	187	204	221	238	272				
675	88	106	124	141	159	177	194	212	230	247	283				
700	92	110	128	146	165	183	201	220	238	256	293				
750	98	118	137	157	177	196	216	235	255	275					
800	105	126	146	167	188	209	230	251	272	293					
850	111	133	156	178	200	222	245	267	289						
900	118	141	165	188	212	235	259	283							
950	124	149	174	199	224	249	273	298							
1000	131	157	183	209	235	262	288								
1050	137	165	192	220	247	275									
1100	144	173	201	230	259	288									
1150	150	181	211	241	271										
1200	157	188	220	251	283										
1250	164	196	229	262	294										
1300	170	204	238	272											
1350	177	212	247	283											
1400	183	220	256	293											
1450	190	228	266												
1500	196	235	275												
1550	203	243	284												
1600	209	251	293												
1650	216	259													
1700	222	267													
1800	235	283													

For Use with [TRANSPREAD](#) Density Meter ..gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.



For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500		
Density Lb. Per Cu Ft.		45													Figures in body of chart = mm of door opening		
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130		
Rate																	
500	41	49	57	65	73	81	90	98	106	114	130	146	163	195	212		
525	43	51	60	68	77	85	94	103	111	120	137	154	171	205	222		
550	45	54	63	72	81	90	98	107	116	125	143	161	179	215	233		
575	47	56	66	75	84	94	103	112	122	131	150	168	187	225	243		
600	49	59	68	78	88	98	107	117	127	137	156	176	195	234	254		
625	51	61	71	81	92	102	112	122	132	142	163	183	203	244	264		
650	53	63	74	85	95	106	116	127	138	148	169	190	212	254	275		
675	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286		
700	57	68	80	91	103	114	125	137	148	159	182	205	228	273	296		
750	61	73	85	98	110	122	134	146	159	171	195	220	244	293	317		
800	65	78	91	104	117	130	143	156	169	182	208	234	260	312			
850	69	83	97	111	124	138	152	166	180	194	221	249	277				
900	73	88	103	117	132	146	161	176	190	205	234	264	293				
950	77	93	108	124	139	155	170	186	201	216	247	278	309				
1000	81	98	114	130	146	163	179	195	212	228	260	293					
1050	85	103	120	137	154	171	188	205	222	239	273	308					
1100	90	107	125	143	161	179	197	215	233	251	286						
1150	94	112	131	150	168	187	206	225	243	262	299						
1200	98	117	137	156	176	195	215	234	254	273	312						
1250	102	122	142	163	183	203	224	244	264	285							
1300	106	127	148	169	190	212	233	254	275	296							
1350	110	132	154	176	198	220	242	264	286	308							
1400	114	137	159	182	205	228	251	273	296	319							
1450	118	142	165	189	212	236	260	283	307								
1500	122	146	171	195	220	244	269	293	317								
1550	126	151	177	202	227	252	277	303									
1600	130	156	182	208	234	260	286	312									
1650	134	161	188	215	242	269	295										
1700	138	166	194	221	249	277	304										
1800	146	176	205	234	264	293											
1900	155	186	216	247	278	309											
2000	163	195	228	260	293												
2500	203	244	285														
3000	244	293															
3500	285																
4000																	
5000																	
6000																	
7000																	
8000																	
9000																	
10000																	

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500		
Density Lb. Per Cu Ft.		50													Figures in body of chart = mm of door opening		
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130		
Rate																	
500	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190		
525	38	46	54	62	69	77	85	92	100	108	123	138	154	185	200		
550	40	48	56	64	73	81	89	97	105	113	129	145	161	193	209		
575	42	51	59	67	76	84	93	101	109	118	135	152	168	202	219		
600	44	53	62	70	79	88	97	105	114	123	141	158	176	211	228		
625	46	55	64	73	82	92	101	110	119	128	146	165	183	220	238		
650	48	57	67	76	86	95	105	114	124	133	152	171	190	228	248		
675	49	59	69	79	89	99	109	119	129	138	158	178	198	237	257		
700	51	62	72	82	92	103	113	123	133	144	164	185	205	246	267		
750	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286		
800	59	70	82	94	105	117	129	141	152	164	187	211	234	281	305		
850	62	75	87	100	112	124	137	149	162	174	199	224	249	299			
900	66	79	92	105	119	132	145	158	171	185	211	237	264	316			
950	70	83	97	111	125	139	153	167	181	195	223	250	278				
1000	73	88	103	117	132	146	161	176	190	205	234	264	293				
1050	77	92	108	123	138	154	169	185	200	215	246	277	308				
1100	81	97	113	129	145	161	177	193	209	226	258	290					
1150	84	101	118	135	152	168	185	202	219	236	270	303					
1200	88	105	123	141	158	176	193	211	228	246	281	316					
1250	92	110	128	146	165	183	201	220	238	256	293						
1300	95	114	133	152	171	190	209	228	248	267	305						
1350	99	119	138	158	178	198	218	237	257	277	316						
1400	103	123	144	164	185	205	226	246	267	287							
1450	106	127	149	170	191	212	234	255	276	297							
1500	110	132	154	176	198	220	242	264	286	308							
1550	114	136	159	182	204	227	250	272	295	318							
1600	117	141	164	187	211	234	258	281	305								
1650	121	145	169	193	218	242	266	290	314								
1700	124	149	174	199	224	249	274	299									
1800	132	158	185	211	237	264	290	316									
1900	139	167	195	223	250	278	306										
2000	146	176	205	234	264	293											
2500	183	220	256	293													
3000	220	264	308														
3500	256	308															
4000	293																
5000																	
6000																	
7000																	
8000																	
9000																	
10000																	

For Use with **TRANSPREAD** Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		55													Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	
Rate																
500	33	40	47	53	60	67	73	80	87	93	107	120	133	160	173	
525	35	42	49	56	63	70	77	84	91	98	112	126	140	168	182	
550	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190	
575	38	46	54	61	69	77	84	92	100	107	123	138	153	184	199	
600	40	48	56	64	72	80	88	96	104	112	128	144	160	192	208	
625	42	50	58	67	75	83	92	100	108	117	133	150	166	200	216	
650	43	52	61	69	78	87	95	104	113	121	138	156	173	208	225	
675	45	54	63	72	81	90	99	108	117	126	144	162	180	216	234	
700	47	56	65	75	84	93	103	112	121	130	149	168	186	224	242	
750	50	60	70	80	90	100	110	120	130	140	160	180	200	240	260	
800	53	64	75	85	96	107	117	128	138	149	170	192	213	256	277	
850	57	68	79	91	102	113	124	136	147	158	181	204	226	272	294	
900	60	72	84	96	108	120	132	144	156	168	192	216	240	288	312	
950	63	76	89	101	114	126	139	152	164	177	202	228	253	304		
1000	67	80	93	107	120	133	146	160	173	186	213	240	266	320		
1050	70	84	98	112	126	140	154	168	182	196	224	252	280			
1100	73	88	103	117	132	146	161	176	190	205	234	264	293			
1150	77	92	107	123	138	153	168	184	199	214	245	276	306			
1200	80	96	112	128	144	160	176	192	208	224	256	288	320			
1250	83	100	117	133	150	166	183	200	216	233	266	300				
1300	87	104	121	138	156	173	190	208	225	242	277	312				
1350	90	108	126	144	162	180	198	216	234	252	288					
1400	93	112	130	149	168	186	205	224	242	261	298					
1450	97	116	135	154	174	193	212	232	251	270	309					
1500	100	120	140	160	180	200	220	240	260	280	320					
1550	103	124	144	165	186	206	227	248	268	289						
1600	107	128	149	170	192	213	234	256	277	298						
1650	110	132	154	176	198	220	242	264	286	308						
1700	113	136	158	181	204	226	249	272	294	317						
1800	120	144	168	192	216	240	264	288	312							
1900	126	152	177	202	228	253	278	304								
2000	133	160	186	213	240	266	293	320								
2500	166	200	233	266	300											
3000	200	240	280	320												
3500	233	280														
4000	266	320														
5000																
6000																
7000																
8000																
9000																
10000																

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		60													Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	
Rate																
500	31	37	43	49	55	61	67	73	79	85	98	110	122	146	159	
525	32	38	45	51	58	64	70	77	83	90	103	115	128	154	167	
550	34	40	47	54	60	67	74	81	87	94	107	121	134	161	175	
575	35	42	49	56	63	70	77	84	91	98	112	126	140	168	182	
600	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190	
625	38	46	53	61	69	76	84	92	99	107	122	137	153	183	198	
650	40	48	56	63	71	79	87	95	103	111	127	143	159	198	214	
675	41	49	58	66	74	82	91	99	107	115	132	148	165	198	214	
700	43	51	60	68	77	85	94	103	111	120	137	154	171	205	222	
750	46	55	64	73	82	92	101	110	119	128	146	165	183	220	238	
800	49	59	68	78	88	98	107	117	127	137	156	176	195	234	254	
850	52	62	73	83	93	104	114	124	135	145	166	187	207	249	270	
900	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286	
950	58	70	81	93	104	116	128	139	151	162	186	209	232	278	301	
1000	61	73	85	98	110	122	134	146	159	171	195	220	244	293	317	
1050	64	77	90	103	115	128	141	154	167	179	205	231	256	308		
1100	67	81	94	107	121	134	148	161	175	188	215	242	269			
1150	70	84	98	112	126	140	154	168	182	197	225	253	281			
1200	73	88	103	117	132	146	161	176	190	205	234	264	293			
1250	76	92	107	122	137	153	168	183	198	214	244	275	305			
1300	79	95	111	127	143	159	175	190	206	222	254	286	317			
1350	82	99	115	132	148	165	181	198	214	231	264	297				
1400	85	103	120	137	154	171	188	205	222	239	273	308				
1450	88	106	124	142	159	177	195	212	230	248	283	319				
1500	92	110	128	146	165	183	201	220	238	256	293					
1550	95	114	132	151	170	189	208	227	246	265	303					
1600	98	117	137	156	176	195	215	234	254	273	312					
1650	101	121	141	161	181	201	222	242	262	282						
1700	104	124	145	166	187	207	228	249	270	290						
1800	110	132	154	176	198	220	242	264	286	308						
1900	116	139	162	186	209	232	255	278	301							
2000	122	146	171	195	220	244	269	293	317							
2500	153	183	214	244	275	305										
3000	183	220	256	293												
3500	214	256	299													
4000	244	293														
5000	305															
6000																
7000																
8000																
9000																
10000																

For Use with **TRANSPREAD** Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		65													Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	
Rate																
500	28	34	39	45	51	56	62	68	73	79	90	101	113	135	146	
525	30	35	41	47	53	59	65	71	77	83	95	106	118	142	154	
550	31	37	43	50	56	62	68	74	81	87	99	112	124	149	161	
575	32	39	45	52	58	65	71	78	84	91	104	117	130	155	168	
600	34	41	47	54	61	68	74	81	88	95	108	122	135	162	176	
625	35	42	49	56	63	70	77	85	92	99	113	127	141	169	183	
650	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190	
675	38	46	53	61	68	76	84	91	99	106	122	137	152	183	198	
700	39	47	55	63	71	79	87	95	103	110	126	142	158	189	205	
750	42	51	59	68	76	85	93	101	110	118	135	152	169	203	220	
800	45	54	63	72	81	90	99	108	117	126	144	162	180	216	234	
850	48	57	67	77	86	96	105	115	124	134	153	172	192	230	249	
900	51	61	71	81	91	101	112	122	132	142	162	183	203	243	264	
950	54	64	75	86	96	107	118	128	139	150	171	193	214	257	278	
1000	56	68	79	90	101	113	124	135	146	158	180	203	225	270	293	
1050	59	71	83	95	106	118	130	142	154	166	189	213	237	284	308	
1100	62	74	87	99	112	124	136	149	161	174	198	223	248	297		
1150	65	78	91	104	117	130	143	155	168	181	207	233	259	311		
1200	68	81	95	108	122	135	149	162	176	189	216	243	270			
1250	70	85	99	113	127	141	155	169	183	197	225	254	282			
1300	73	88	103	117	132	146	161	176	190	205	234	264	293			
1350	76	91	106	122	137	152	167	183	198	213	243	274	304			
1400	79	95	110	126	142	158	174	189	205	221	252	284	315			
1450	82	98	114	131	147	163	180	196	212	229	261	294				
1500	85	101	118	135	152	169	186	203	220	237	270	304				
1550	87	105	122	140	157	175	192	210	227	244	279	314				
1600	90	108	126	144	162	180	198	216	234	252	288					
1650	93	112	130	149	167	186	204	223	242	260	297					
1700	96	115	134	153	172	192	211	230	249	268	306					
1800	101	122	142	162	183	203	223	243	264	284						
1900	107	128	150	171	193	214	235	257	278	300						
2000	113	135	158	180	203	225	248	270	293	315						
2500	141	169	197	225	254	282	310									
3000	169	203	237	270	304											
3500	197	237	276	315												
4000	225	270	315													
5000	282															
6000																
7000																
8000																
9000																
10000																

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		70													Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	
Rate																
500	26	31	37	42	47	52	58	63	68	73	84	94	105	126	136	
525	27	33	38	44	49	55	60	66	71	77	88	99	110	132	143	
550	29	35	40	46	52	58	63	69	75	81	92	104	115	138	150	
575	30	36	42	48	54	60	66	72	78	84	96	108	120	144	156	
600	31	38	44	50	56	63	69	75	82	88	100	113	126	151	163	
625	33	39	46	52	59	65	72	78	85	92	105	118	131	157	170	
650	34	41	48	54	61	68	75	82	88	95	109	122	136	163	177	
675	35	42	49	56	64	71	78	85	92	99	113	127	141	169	184	
700	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190	
750	39	47	55	63	71	78	86	94	102	110	126	141	157	188	204	
800	42	50	59	67	75	84	92	100	109	117	134	151	167	201	218	
850	44	53	62	71	80	89	98	107	116	124	142	160	178	213	231	
900	47	56	66	75	85	94	104	113	122	132	151	169	188	226	245	
950	50	60	70	80	89	99	109	119	129	139	159	179	199	239	258	
1000	52	63	73	84	94	105	115	126	136	146	167	188	209	251	272	
1050	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286	
1100	58	69	81	92	104	115	127	138	150	161	184	207	230	276	299	
1150	60	72	84	96	108	120	132	144	156	168	193	217	241	289	313	
1200	63	75	88	100	113	126	138	151	163	176	201	226	251	301		
1250	65	78	92	105	118	131	144	157	170	183	209	235	262	314		
1300	68	82	95	109	122	136	150	163	177	190	218	245	272			
1350	71	85	99	113	127	141	155	169	184	198	226	254	282			
1400	73	88	103	117	132	146	161	176	190	205	234	264	293			
1450	76	91	106	121	137	152	167	182	197	212	243	273	303			
1500	78	94	110	126	141	157	173	188	204	220	251	282	314			
1550	81	97	114	130	146	162	178	195	211	227	259	292				
1600	84	100	117	134	151	167	184	201	218	234	268	301				
1650	86	104	121	138	155	173	190	207	224	242	276	311				
1700	89	107	124	142	160	178	196	213	231	249	285					
1800	94	113	132	151	169	188	207	226	245	264	301					
1900	99	119	139	159	179	199	219	239	258	278	318					
2000	105	126	146	167	188	209	230	251	272	293						
2500	131	157	183	209	235	262	288	314								
3000	157	188	220	251	282	314										
3500	183	220	256	293												
4000	209	251	293													
5000	262	314														
6000	314															
7000																
8000																
9000																
10000																



For Use with **TRANSPREAD** Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		75													Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	Rate
500		29	34	39	44	49	54	59	63	68	78	88	98	117	127	
525	26	31	36	41	46	51	56	62	67	72	82	92	103	123	133	
550	27	32	38	43	48	54	59	64	70	75	86	97	107	129	140	
575	28	34	39	45	51	56	62	67	73	79	90	101	112	135	146	
600	29	35	41	47	53	59	64	70	76	82	94	105	117	141	152	
625	31	37	43	49	55	61	67	73	79	85	98	110	122	146	159	
650	32	38	44	51	57	63	70	76	83	89	102	114	127	152	165	
675	33	40	46	53	59	66	73	79	86	92	105	119	132	158	171	
700	34	41	48	55	62	68	75	82	89	96	109	123	137	164	178	
750	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190	
800	39	47	55	62	70	78	86	94	102	109	125	141	156	187	203	
850	41	50	58	66	75	83	91	100	108	116	133	149	166	199	216	
900	44	53	62	70	79	88	97	105	114	123	141	158	176	211	228	
950	46	56	65	74	83	93	102	111	121	130	148	167	186	223	241	
1000	49	59	68	78	88	98	107	117	127	137	156	176	195	234	254	
1050	51	62	72	82	92	103	113	123	133	144	164	185	205	246	267	
1100	54	64	75	86	97	107	118	129	140	150	172	193	215	258	279	
1150	56	67	79	90	101	112	124	135	146	157	180	202	225	270	292	
1200	59	70	82	94	105	117	129	141	152	164	187	211	234	281	305	
1250	61	73	85	98	110	122	134	146	159	171	195	220	244	293	317	
1300	63	76	89	102	114	127	140	152	165	178	203	228	254	305		
1350	66	79	92	105	119	132	145	158	171	185	211	237	264	316		
1400	68	82	96	109	123	137	150	164	178	191	219	246	273			
1450	71	85	99	113	127	142	156	170	184	198	227	255	283			
1500	73	88	103	117	132	146	161	176	190	205	234	264	293			
1550	76	91	106	121	136	151	166	182	197	212	242	272	303			
1600	78	94	109	125	141	156	172	187	203	219	250	281	312			
1650	81	97	113	129	145	161	177	193	209	226	258	290				
1700	83	100	116	133	149	166	183	199	216	232	266	299				
1800	88	105	123	141	158	176	193	211	228	246	281	316				
1900	93	111	130	148	167	186	204	223	241	260	297					
2000	98	117	137	156	176	195	215	234	254	273	312					
2500	122	146	171	195	220	244	269	293	317							
3000	146	176	205	234	264	293										
3500	171	205	239	273	308											
4000	195	234	273	312												
5000	244	293														
6000	293															
7000																
8000																
9000																
10000																

Gear Box...High. Gear		RATE CHART LB. PER ACRE													gb005, 500	
Density Lb. Per Cu Ft.		80													Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130	Rate
500		27	32	37	41	46	50	55	60	64	73	82	92	110	119	
525	29	34	38	43	48	53	58	62	67	71	80	89	99	117	125	
550	25	30	35	40	45	50	55	60	65	70	81	91	101	121	131	
575	26	32	37	42	47	53	58	63	68	74	84	95	105	126	137	
600	27	33	38	44	49	55	60	66	71	77	88	99	110	132	143	
625	29	34	40	46	51	57	63	69	74	80	92	103	114	137	149	
650	30	36	42	48	54	60	65	71	77	83	95	107	119	143	155	
675	31	37	43	49	56	62	68	74	80	87	99	111	124	148	161	
700	32	38	45	51	58	64	70	77	83	90	103	115	128	154	167	
750	34	41	48	55	62	69	76	82	89	96	110	124	137	165	179	
800	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190	
850	39	47	54	62	70	78	86	93	101	109	124	140	156	187	202	
900	41	49	58	66	74	82	91	99	107	115	132	148	165	198	214	
950	43	52	61	70	78	87	96	104	113	122	139	157	174	209	226	
1000	46	55	64	73	82	92	101	110	119	128	146	165	183	220	238	
1050	48	58	67	77	87	96	106	115	125	135	154	173	192	231	250	
1100	50	60	70	81	91	101	111	121	131	141	161	181	201	242	262	
1150	53	63	74	84	95	105	116	126	137	147	168	189	211	253	274	
1200	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286	
1250	57	69	80	92	103	114	126	137	149	160	183	206	229	275	298	
1300	60	71	83	95	107	119	131	143	155	167	190	214	238	286	309	
1350	62	74	87	99	111	124	136	148	161	173	198	222	247	297		
1400	64	77	90	103	115	128	141	154	167	179	205	231	256	308		
1450	66	80	93	106	119	133	146	159	173	186	212	239	265	319		
1500	69	82	96	110	124	137	151	165	179	192	220	247	275			
1550	71	85	99	114	128	142	156	170	184	199	227	255	284			
1600	73	88	103	117	132	146	161	176	190	205	234	264	293			
1650	76	91	106	121	136	151	166	181	196	211	242	272	302			
1700	78	93	109	124	140	156	171	187	202	218	249	280	311			
1800	82	99	115	132	148	165	181	198	214	231	264	297				
1900	87	104	122	139	157	174	191	209	226	244	278	313				
2000	92	110	128	146	165	183	201	220	238	256	293					
2500	114	137	160	183	206	229	252	275	298							
3000	137	165	192	220	247	275	302									
3500	160	192	224	256	288											
4000	183	220	256	293												
5000	229	275														
6000	275															
7000																
8000																
9000																
10000																

For Use with **TRANSPREAD** Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use  
 ... Other rates and rate calculator can be viewed at [www.transpread.com/spreaders/trailers](http://www.transpread.com/spreaders/trailers), also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE												gb005, 500	
Density Lb. Per Cu Ft.		90												Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
500			28	33	37	41	45	49	53	57	65	73	81	98	106
525		26	30	34	38	43	47	51	56	60	68	77	85	103	111
550		27	31	36	40	45	49	54	58	63	72	81	90	107	116
575		28	33	37	42	47	51	56	61	66	75	84	94	112	122
600		29	34	39	44	49	54	59	63	68	78	88	98	117	127
625	25	31	36	41	46	51	56	61	66	71	81	92	102	122	132
650	26	32	37	42	48	53	58	63	69	74	85	95	106	127	138
675	27	33	38	44	49	55	60	66	71	77	88	99	110	132	143
700	28	34	40	46	51	57	63	68	74	80	91	103	114	137	148
750	31	37	43	49	55	61	67	73	79	85	98	110	122	146	159
800	33	39	46	52	59	65	72	78	85	91	104	117	130	156	169
850	35	41	48	55	62	69	76	83	90	97	111	124	138	166	180
900	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190
950	39	46	54	62	70	77	85	93	100	108	124	139	155	186	201
1000	41	49	57	65	73	81	90	98	106	114	130	146	163	195	212
1050	43	51	60	68	77	85	94	103	111	120	137	154	171	205	222
1100	45	54	63	72	81	90	98	107	116	125	143	161	179	215	233
1150	47	56	66	75	84	94	103	112	122	131	150	168	187	225	243
1200	49	59	68	78	88	98	107	117	127	137	156	176	195	234	254
1250	51	61	71	81	92	102	112	122	132	142	163	183	203	244	264
1300	53	63	74	85	95	106	116	127	138	148	169	190	212	254	275
1350	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286
1400	57	68	80	91	103	114	125	137	148	159	182	205	228	273	296
1450	59	71	83	94	106	118	130	142	153	165	189	212	236	283	307
1500	61	73	85	98	110	122	134	146	159	171	195	220	244	293	317
1550	63	76	88	101	114	126	139	151	164	177	202	227	252	303	
1600	65	78	91	104	117	130	143	156	169	182	208	234	260	312	
1650	67	81	94	107	121	134	148	161	175	188	215	242	269		
1700	69	83	97	111	124	138	152	166	180	194	221	249	277		
1800	73	88	103	117	132	146	161	176	190	205	234	264	293		
1900	77	93	108	124	139	155	170	186	201	216	247	278	309		
2000	81	98	114	130	146	163	179	195	212	228	260	293			
2500	102	122	142	163	183	203	224	244	264	285					
3000	122	146	171	195	220	244	269	293	317						
3500	142	171	199	228	256	285	313								
4000	163	195	228	260	293										
5000	203	244	285												
6000	244	293													
7000	285														
8000															
9000															
10000															

Gear Box...High. Gear		RATE CHART LB. PER ACRE												gb005, 500	
Density Lb. Per Cu Ft.		100												Figures in body of chart = mm of door opening	
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
500			26	29	33	37	40	44	48	51	59	66	73	88	95
525		27	31	35	38	42	46	50	54	58	66	73	81	97	100
550		28	32	36	40	44	48	52	56	60	68	76	84	101	105
575		25	29	34	38	42	46	51	55	59	67	76	84	101	109
600		26	31	35	40	44	48	53	57	62	70	79	88	105	114
625	25	27	32	37	41	46	50	55	60	64	73	82	92	110	119
650	26	29	33	38	43	48	52	57	62	67	76	86	95	114	124
675	27	30	35	40	44	49	54	59	64	69	79	89	99	119	129
700	26	31	36	41	46	51	56	62	67	72	82	92	103	123	133
750	27	33	38	44	49	55	60	66	71	77	88	99	110	132	143
800	29	35	41	47	53	59	64	70	76	82	94	105	117	141	152
850	31	37	44	50	56	62	68	75	81	87	100	112	124	149	162
900	33	40	46	53	59	66	73	79	86	92	105	119	132	158	171
950	35	42	49	56	63	70	77	83	90	97	111	125	139	167	181
1000	37	44	51	59	66	73	81	88	95	103	117	132	146	176	190
1050	38	46	54	62	69	77	85	92	100	108	123	138	154	185	200
1100	40	48	56	64	73	81	89	97	105	113	129	145	161	193	209
1150	42	51	59	67	76	84	93	101	109	118	135	152	168	202	219
1200	44	53	62	70	79	88	97	105	114	123	141	158	176	211	228
1250	46	55	64	73	82	92	101	110	119	128	146	165	183	220	238
1300	48	57	67	76	86	95	105	114	124	133	152	171	190	228	248
1350	49	59	69	79	89	99	109	119	129	138	158	178	198	237	257
1400	51	62	72	82	92	103	113	123	133	144	164	185	205	246	267
1450	53	64	74	85	96	106	117	127	138	149	170	191	212	255	276
1500	55	66	77	88	99	110	121	132	143	154	176	198	220	264	286
1550	57	68	79	91	102	114	125	136	148	159	182	204	227	272	295
1600	59	70	82	94	105	117	129	141	152	164	187	211	234	281	305
1650	60	73	85	97	109	121	133	145	157	169	193	218	242	290	314
1700	62	75	87	100	112	124	137	149	162	174	199	224	249	299	
1800	66	79	92	105	119	132	145	158	171	185	211	237	264	316	
1900	70	83	97	111	125	139	153	167	181	195	223	250	278		
2000	73	88	103	117	132	146	161	176	190	205	234	264	293		
2500	92	110	128	146	165	183	201	220	238	256	293				
3000	110	132	154	176	198	220	242	264	286	308					
3500	128	154	179	205	231	256	282	308							
4000	146	176	205	234	264	293									
5000	183	220	256	293											
6000	220	264	308												
7000	256	308													
8000	293														
9000															
10000															