

For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500														
Density Lb. Per Cu Ft.		45 Figures in body of chart = mm of door opening														
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
20																26
30																33
40																39
50																46
60																52
70																59
80																65
90																72
100																78
110																85
120																92
130																98
140																105
150																111
160																118
170																124
180																131
190																137
200																144
210																150
220																157
230																164
240																170
250																177
260																183
270																190
280																196
290																209
300																222
320																235
340																249
360																262
380																278
400																294
425																
450																
475																
500																
525																
550																
575																
600																

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500														
Density Lb. Per Cu Ft.		50 Figures in body of chart = mm of door opening														
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate																
20																
30																
40																
50																
60																
70																
80																
90																
100																
110																
120																
130																
140																
150																
160																
170																
180																
190																
200																
210																
220																
230																
240																
250																
260																
270																
280																
290																
300																
320																
340																
360																
380																
400																
425																
450																
475																
500																
525																
550																
575																
600																

For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear **RATE CHART LB. PER ACRE** gb005, 500
 Density Lb. Per Cu Ft. **55** Figures in body of chart = mm of door opening

Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate															
20															27
30															32
40															37
50															43
60															48
70								26	29	31	34	37	40	40	45
80								29	32	35	39	42	45	45	50
90								31	35	39	43	47	51	50	55
100								32	36	40	44	48	52	51	56
110					27			35	39	43	47	51	55	55	59
120					26	30		39	43	47	51	56	60	60	64
130					28	32		42	46	51	56	60	65	65	70
140					30	35		45	50	55	60	65	70	70	75
150				27	32	37		48	54	59	64	70	75	75	80
160				29	34	40		51	57	63	68	74	80	80	86
170				30	36	42		55	61	67	73	79	85	85	91
180		26		32	39	45		58	64	71	77	83	90	90	96
190		27		34	41	47		61	68	75	81	88	95	95	102
200		29	36	43	50	57	64	71	78	86	93	100	107	107	112
210		30	37	45	52	60	67	75	82	90	97	105	105	105	111
220		31	39	47	55	63	71	78	86	94	102	110	110	110	118
230		33	41	49	57	66	74	82	90	98	107	115	115	115	123
240	26	34	43	51	60	68	77	86	94	103	111	120	120	120	128
250	27	36	45	54	62	71	80	89	98	107	116	125	125	125	134
260	28	37	46	56	65	74	83	93	102	111	121	130	130	130	139
270	29	39	48	58	67	77	87	96	106	116	125	135	135	135	144
280	30	40	50	60	70	80	90	100	110	120	130	140	140	140	150
290	31	41	52	62	72	83	93	103	114	124	134	145	145	145	155
300	32	43	54	64	75	86	96	107	118	128	139	150	150	150	161
320	34	46	57	68	80	91	103	114	126	137	148	160	160	160	171
340	36	49	61	73	85	97	109	121	133	146	158	170	170	170	182
360	39	51	64	77	90	103	116	128	141	154	167	180	180	180	193
380	27	41	54	68	81	95	108	122	136	149	163	176	190	190	203
400	29	43	57	71	86	100	114	128	143	157	171	185	200	200	214
425	30	45	61	76	91	106	121	136	152	167	182	197	212	212	227
450	32	48	64	80	96	112	128	144	161	177	193	209	225	225	241
475	34	51	68	85	102	119	136	153	169	186	203	220	237	237	254
500	36	54	71	89	107	125	143	161	178	196	214	232	250	250	268
525	37	56	75	94	112	131	150	169	187	206	225	243	262	262	281
550	39	59	78	98	118	137	157	177	196	216	235	255	275	275	294
575	41	62	82	103	123	144	164	185	205	226	246	267	287	287	
600	43	64	86	107	128	150	171	193	214	235	257	278	300	300	

Gear Box...Low. Gear **RATE CHART LB. PER ACRE** gb005, 500
 Density Lb. Per Cu Ft. **60** Figures in body of chart = mm of door opening

Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate															
20															
30															
40															
50															27
60															32
70															37
80															43
90															48
100															54
110															59
120															64
130															70
140															75
150															80
160															86
170															91
180															96
190															102
200															107
210															112
220															118
230															123
240															128
250															134
260															139
270															144
280															150
290															155
300															161
320															171
340															182
360															193
380															203
400															214
425															227
450															241
475															254
500															268
525															281
550															294
575															
600															

For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE														gb005, 500	
Density Lb. Per Cu Ft.		65														Figures in body of chart = mm of door opening	
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																	
20																	
30																	
40																	
50																	
60															25	25	
70															25	27	
80															30	30	
90															34	34	
100															36	36	
110															38	41	
120															41	45	
130															42	45	
140															44	50	
150															46	50	
160															47	54	
170															51	54	
180															51	54	
190															55	59	
200															55	59	
210															59	63	
220															63	63	
230															68	68	
240															72	72	
250															77	77	
260															81	81	
270															86	86	
280															88	91	
290															91	95	
300															95	99	
320															100	103	
340															103	109	
360															109	113	
380															113	118	
400															118	122	
425															122	127	
450															127	131	
475															131	136	
500															136	145	
525															145	154	
550															154	163	
575															163	172	
600															172	181	

Gear Box...Low. Gear		RATE CHART LB. PER ACRE														gb005, 500	
Density Lb. Per Cu Ft.		70														Figures in body of chart = mm of door opening	
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																	
20																	
30																	
40																	
50																	
60																25	
70																29	
80																34	
90																38	
100																42	
110																46	
120																50	
130																55	
140																59	
150																63	
160																67	
170																71	
180																76	
190																80	
200																84	
210																88	
220																92	
230																97	
240																101	
250																105	
260																109	
270																114	
280																118	
290																122	
300																126	
320																135	
340																143	
360																151	
380																160	
400																168	
425																179	
450																189	
475																200	
500																210	
525																221	
550																231	
575																242	
600																252	

For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500															
Density Lb. Per Cu Ft.		75 Figures in body of chart = mm of door opening															
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																	
20																	
30																	
40																	
50																	
60																	
70															26	26	
80														25	27	29	
90														31	33	35	
100														26	29	31	
110														29	32	34	
120														26	28	31	
130														27	31	34	
140														29	33	37	
150														31	35	39	
160														25	29	33	
170														27	31	36	
180														28	33	38	
190														30	35	40	
200														26	31	37	
210														27	33	38	
220														29	35	40	
230														30	36	42	
240														25	31	38	
250														26	33	39	
260														27	34	41	
270														28	35	42	
280														29	37	44	
290														30	38	46	
300														31	39	47	
320														25	33	42	
340														27	36	44	
360														28	38	47	
380														30	40	50	
400														31	42	52	
425														33	44	56	
450														35	47	59	
475														37	50	62	
500														26	39	52	
525														27	41	55	
550														29	43	58	
575														30	45	60	
600														31	47	63	

Gear Box...Low. Gear		RATE CHART LB. PER ACRE gb005, 500															
Density Lb. Per Cu Ft.		80 Figures in body of chart = mm of door opening															
Width.		4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	
Rate																	
20																	
30																	
40																	
50																	
60																	
70																26	
80															26	27	
90															26	27	
100															27	29	
110															27	30	
120															29	32	
130															31	34	
140															26	29	
150															27	31	
160															26	29	
170															25	29	
180															26	31	
190															28	33	
200															29	34	
210															26	31	
220															27	32	
230															28	34	
240															29	35	
250															31	37	
260															26	32	
270															26	33	
280															27	34	
290															28	36	
300															29	37	
320															26	32	
340															25	31	
360															26	32	
380															28	34	
400															29	35	
425															31	37	
450															33	41	
475															35	47	
500															26	32	
525															27	33	
550															29	35	
575															31	37	
600															33	41	

For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

 
Gear Box...Med. Gear													RATE CHART LB. PER ACRE gb005, 500																		
Density Lb. Per Cu Ft. 45													Figures in body of chart = mm of door opening																		
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
Rate 200					28	33	37	42	47	51	56	60	65	70	70																
225				26	31	37	42	47	52	58	63	68	73	73	78																
250				29	35	41	47	52	58	64	70	76	81	81	87																
275			26	32	38	45	51	58	64	70	77	83	90	90	96																
300			28	35	42	49	56	63	70	77	84	91	98	98	105																
325			30	38	45	53	60	68	76	83	91	98	106	106	113																
350			33	41	49	57	65	73	81	90	98	106	114	114	122																
375		26	35	44	52	61	70	78	87	96	105	113	122	122	131																
400		28	37	47	56	65	74	84	93	102	112	121	130	130	140																
425		30	40	49	59	69	79	89	99	109	119	128	138	138	148																
450		31	42	52	63	73	84	94	105	115	126	136	146	146	157																
475		33	44	55	66	77	88	99	110	121	133	144	155	155	166																
500		35	47	58	70	81	93	105	116	128	140	151	163	163	174																
525		37	49	61	73	85	98	110	122	134	146	159	171	171	183																
550		38	51	64	77	90	102	115	128	141	153	166	179	179	192																
575	27	40	53	67	80	94	107	120	134	147	160	174	187	187	201																
600	28	42	56	70	84	98	112	126	140	153	167	181	195	195	209																
625	29	44	58	73	87	102	116	131	145	160	174	189	203	203	218																
650	30	45	60	76	91	106	121	136	151	166	181	196	212	212	227																
675	31	47	63	78	94	110	126	141	157	173	188	204	220	220	235																
700	33	49	65	81	98	114	130	146	163	179	195	212	228	228	244																
750	35	52	70	87	105	122	140	157	174	192	209	227	244	244	262																
800	37	56	74	93	112	130	149	167	186	205	223	242	260	260	279																
850	40	59	79	99	119	138	158	178	198	217	237	257	277	277	296																
900	42	63	84	105	126	146	167	188	209	230	251	272	293	293																	
950	44	66	88	110	133	155	177	199	221	243	265	287																			
1000	47	70	93	116	140	163	186	209	233	256	279																				
1050	49	73	98	122	146	171	195	220	244	269	293																				
1100	51	77	102	128	153	179	205	230	256	281																					
1150	53	80	107	134	160	187	214	241	267	294																					
1200	56	84	112	140	167	195	223	251	279																						
1250	58	87	116	145	174	203	233	262	291																						
1300	60	91	121	151	181	212	242	272																							
1350	63	94	126	157	188	220	251	283																							
1400	65	98	130	163	195	228	260	293																							
1450	67	101	135	169	202	236	270																								
1500	70	105	140	174	209	244	279																								
1550	72	108	144	180	216	252	288																								
1600	74	112	149	186	223	260	298																								
1650	77	115	153	192	230	269																									
1700	79	119	158	198	237	277																									
1800	84	126	167	209	251	293																									

For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear													RATE CHART LB. PER ACRE													gb005, 500
Density Lb. Per Cu Ft.													90													Figures in body of chart = mm of door opening
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
200																26										
225																28										
250																30										
275																33										
300																35										
325																37										
350																39										
375																41										
400																44										
425																48										
450																52										
475																57										
500																61										
525																65										
550																70										
575																74										
600																78										
625																83										
650																87										
675																92										
700																96										
750																100										
800																105										
850																109										
900																113										
950																118										
1000																122										
1050																127										
1100																131										
1150																136										
1200																140										
1250																145										
1300																149										
1350																154										
1400																158										
1450																163										
1500																167										
1550																172										
1600																176										
1650																181										
1700																185										
1800																189										

Gear Box...Med. Gear													RATE CHART LB. PER ACRE													gb005, 500
Density Lb. Per Cu Ft.													100													Figures in body of chart = mm of door opening
Width.	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	Rate										
200																25										
225																27										
250																29										
275																31										
300																34										
325																37										
350																40										
375																43										
400																47										
425																51										
450																55										
475																59										
500																63										
525																67										
550																71										
575																75										
600																78										
625																82										
650																86										
675																90										
700																94										
750																98										
800																102										
850																106										
900																110										
950																114										
1000																118										
1050																122										
1100																126										
1150																130										
1200																134										
1250																138										
1300																142										
1350																146										
1400																150										
1450																154										
1500																158										
1550																162										
1600																166										
1650																170										
1700																174										
1800																178										

For Use with [TRANSPREAD](#) Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.



For Use with **TRANSPREAD** Density Meter ..gb005 Narrow, Standard Jockey. Accuracy of final settings operators responsibility based on use ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.



