

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		45 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20													26	29	35
30									26	28	31	35	39	44	53
40					26	29	32	35	38	41	47	53	58	58	70
50			26	29	33	37	40	44	47	51	58	66	73	73	88
60		26	31	35	39	44	48	53	57	61	70	79	88	88	105
70	26	31	36	41	46	51	56	61	66	72	82	92	102	102	123
80	29	35	41	47	53	58	64	70	76	82	93	105	117	117	140
90	33	39	46	53	59	66	72	79	85	92	105	118	131	131	158
100	37	44	51	58	66	73	80	88	95	102	117	131	146	146	175
110	40	48	56	64	72	80	88	96	104	112	128	145	161	161	193
120	44	53	61	70	79	88	96	105	114	123	140	158	175	175	210
130	47	57	66	76	85	95	104	114	123	133	152	171	190	190	228
140	51	61	72	82	92	102	112	123	133	143	164	184	204	204	245
150	55	66	77	88	99	110	120	131	142	153	175	197	219	219	263
160	58	70	82	93	105	117	128	140	152	164	187	210	234	234	280
170	62	74	87	99	112	124	137	149	161	174	199	223	248	248	298
180	66	79	92	105	118	131	145	158	171	184	210	237	263	263	
190	69	83	97	111	125	139	153	166	180	194	222	250	277	277	
200	73	88	102	117	131	146	161	175	190	204	234	263	292	292	
210	77	92	107	123	138	153	169	184	199	215	245	276			
220	80	96	112	128	145	161	177	193	209	225	257	289			
230	84	101	118	134	151	168	185	201	218	235	269				
240	88	105	123	140	158	175	193	210	228	245	280				
250	91	110	128	146	164	183	201	219	237	256	292				
260	95	114	133	152	171	190	209	228	247	266					
270	99	118	138	158	177	197	217	237	256	276					
280	102	123	143	164	184	204	225	245	266	286					
290	106	127	148	169	191	212	233	254	275	296					
300	110	131	153	175	197	219	241	263	285						
320	117	140	164	187	210	234	257	280							
340	124	149	174	199	223	248	273	298							
360	131	158	184	210	237	263	289								
380	139	166	194	222	250	277									
400	146	175	204	234	263	292									
425	155	186	217	248	279										
450	164	197	230	263	296										
475	173	208	243	277											
500	183	219	256	292											
525	192	230	268												
550	201	241	281												
575	210	252	294												
600	219	263													

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		50 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20														26	32
30														26	32
40														26	32
50														26	32
60														26	32
70														26	32
80														26	32
90														26	32
100														26	32
110														26	32
120														26	32
130														26	32
140														26	32
150														26	32
160														26	32
170														26	32
180														26	32
190														26	32
200														26	32
210														26	32
220														26	32
230														26	32
240														26	32
250														26	32
260														26	32
270														26	32
280														26	32
290														26	32
300														26	32
320														26	32
340														26	32
360														26	32
380														26	32
400														26	32
425														26	32
450														26	32
475														26	32
500														26	32
525														26	32
550														26	32
575														26	32
600														26	32

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		55 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20														29	29
30										25	29	32	36	36	43
40										26	29	31	33	38	43
50					27	30	33	36	39	42	48	54	60	60	72
60			25	29	32	36	39	43	47	50	57	65	72	72	86
70		25	29	33	38	42	46	50	54	59	67	75	84	84	100
80		29	33	38	43	48	53	57	62	67	76	86	96	96	115
90	27	32	38	43	48	54	59	65	70	75	86	97	108	108	129
100	30	36	42	48	54	60	66	72	78	84	96	108	119	119	143
110	33	39	46	53	59	66	72	79	85	92	105	118	131	131	158
120	36	43	50	57	65	72	79	86	93	100	115	129	143	143	172
130	39	47	54	62	70	78	85	93	101	109	124	140	155	155	186
140	42	50	59	67	75	84	92	100	109	117	134	151	167	167	201
150	45	54	63	72	81	90	99	108	116	125	143	161	179	179	215
160	48	57	67	76	86	96	105	115	124	134	153	172	191	191	229
170	51	61	71	81	91	102	112	122	132	142	162	183	203	203	244
180	54	65	75	86	97	108	118	129	140	151	172	194	215	215	258
190	57	68	79	91	102	113	125	136	148	159	182	204	227	227	272
200	60	72	84	96	108	119	131	143	155	167	191	215	239	239	287
210	63	75	88	100	113	125	138	151	163	176	201	226	251	251	
220	66	79	92	105	118	131	145	158	171	184	210	237	263	263	
230	69	82	96	110	124	137	151	165	179	192	220	247	275	275	
240	72	86	100	115	129	143	158	172	186	201	229	258	287	287	
250	75	90	105	119	134	149	164	179	194	209	239	269	299	299	
260	78	93	109	124	140	155	171	186	202	217	248	280			
270	81	97	113	129	145	161	177	194	210	226	258	290			
280	84	100	117	134	151	167	184	201	217	234	268				
290	87	104	121	139	156	173	191	208	225	242	277				
300	90	108	125	143	161	179	197	215	233	251	287				
320	96	115	134	153	172	191	210	229	248	268					
340	102	122	142	162	183	203	223	244	264	284					
360	108	129	151	172	194	215	237	258	280						
380	113	136	159	182	204	227	250	272	295						
400	119	143	167	191	215	239	263	287							
425	127	152	178	203	228	254	279								
450	134	161	188	215	242	269	296								
475	142	170	199	227	255	284									
500	149	179	209	239	269	299									
525	157	188	219	251	282										
550	164	197	230	263	296										
575	172	206	240	275											
600	179	215	251	287											

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		60 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															26
30														26	30
40														33	33
50														33	39
60														36	44
70														43	49
80														48	55
90														53	66
100														59	66
110														66	79
120														72	86
130														77	92
140														84	100
150														91	108
160														99	118
170														108	129
180														118	143
190														129	158
200														141	172
210														154	186
220														168	201
230														183	215
240														199	229
250														215	244
260														231	258
270														248	272
280														266	287
290														284	301
300														303	317
320														327	341
340														353	366
360														381	391
380														411	416
400														443	448
425														477	482
450														513	518
475														551	556
500														591	596
525														633	638
550														677	682
575														723	728
600														771	776

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		75 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															
40															
50														26	26
60														35	35
70														44	44
80														53	53
90														63	63
100														74	74
110														84	84
120														95	95
130														105	105
140														116	116
150														126	126
160														137	137
170														147	147
180														158	158
190														168	168
200														179	179
210														189	189
220														200	200
230														210	210
240														221	221
250														231	231
260														242	242
270														252	252
280														263	263
290														273	273
300														284	284
320														294	294
340															
360															
380															
400															
425															
450															
475															
500															
525															
550															
575															
600															

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		80 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															
40															
50															
60															
70															
80															
90															
100															
110															
120															
130															
140															
150															
160															
170															
180															
190															
200															
210															
220															
230															
240															
250															
260															
270															
280															
290															
300															
320															
340															
360															
380															
400															
425															
450															
475															
500															
525															
550															
575															
600															

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		90													
		Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															26
40														26	29
50														29	35
60														37	44
70														41	51
80														44	58
90														47	66
100														51	73
110														55	81
120														59	90
130														63	100
140														67	110
150														71	120
160														75	130
170														79	140
180														83	150
190														87	160
200														91	170
210														95	180
220														99	190
230														103	200
240														107	210
250														111	220
260														115	230
270														119	240
280														123	250
290														127	260
300														131	270
320														139	290
340														147	310
360														155	330
380														163	350
400														171	370
425														183	390
450														195	410
475														207	430
500														219	450
525														231	470
550														243	490
575														255	510
600														267	530

Gear Box		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		100													
		Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
20															
30															
40															
50															
60															
70															
80															
90															
100															
110															
120															
130															
140															
150															
160															
170															
180															
190															
200															
210															
220															
230															
240															
250															
260															
270															
280															
290															
300															
320															
340															
360															
380															
400															
425															
450															
475															
500															
525															
550															
575															
600															

For Use with [TRANSPREAD](#) Density Meter .gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		45 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	39	47	55	62	70	78	86	93	101	109	125	140	156	187	187
225	44	53	61	70	79	88	96	105	114	123	140	158	175	175	210
250	49	58	68	78	88	97	107	117	127	136	156	175	195	195	234
275	54	64	75	86	96	107	118	128	139	150	171	193	214	214	257
300	58	70	82	93	105	117	128	140	152	164	187	210	234	234	280
325	63	76	89	101	114	127	139	152	164	177	202	228	253	253	
350	68	82	95	109	123	136	150	164	177	191	218	245	273	273	
375	73	88	102	117	131	146	161	175	190	204	234	263	292	292	
400	78	93	109	125	140	156	171	187	202	218	249	280			
425	83	99	116	132	149	165	182	199	215	232	265	298			
450	88	105	123	140	158	175	193	210	228	245	280				
475	92	111	129	148	166	185	203	222	240	259	296				
500	97	117	136	156	175	195	214	234	253	273					
525	102	123	143	164	184	204	225	245	266	286					
550	107	128	150	171	193	214	236	257	278	300					
575	112	134	157	179	201	224	246	269	291						
600	117	140	164	187	210	234	257	280							
625	122	146	170	195	219	243	268	292							
650	127	152	177	202	228	253	278								
675	131	158	184	210	237	263	289								
700	136	164	191	218	245	273	300								
750	146	175	204	234	263	292									
800	156	187	218	249	280										
850	165	199	232	265	298										
900	175	210	245	280											
950	185	222	259	296											
1000	195	234	273												
1050	204	245	286												
1100	214	257	300												
1150	224	269													
1200	234	280													
1250	243	292													
1300	253														
1350	263														
1400	273														
1450	282														
1500	292														
1550															
1600															
1650															
1700															
1800															

Gear Box...Med. Gear		RATE CHART LB. PER ACRE gb005													
Density Lb. Per Cu Ft.		50 Figures in body of chart = mm of door opening													
Width.	25	30	35	40	45	50	55	60	65	70	80	90	100	120	130
Rate															
200	35	42	49	56	63	70	77	84	91	98	112	126	140	168	168
225	39	47	55	63	71	79	87	95	102	110	126	142	158	158	189
250	44	53	61	70	79	88	96	105	114	123	140	158	175	175	210
275	48	58	67	77	87	96	106	116	125	135	154	173	193	193	231
300	53	63	74	84	95	105	116	126	137	147	168	189	210	210	252
325	57	68	80	91	102	114	125	137	148	159	182	205	228	228	273
350	61	74	86	98	110	123	135	147	159	172	196	221	245	245	294
375	66	79	92	105	118	131	145	158	171	184	210	237	263	263	
400	70	84	98	112	126	140	154	168	182	196	224	252	280	280	
425	74	89	104	119	134	149	164	179	194	208	238	268	298	298	
450	79	95	110	126	142	158	173	189	205	221	252	284			
475	83	100	117	133	150	166	183	200	216	233	266	300			
500	88	105	123	140	158	175	193	210	228	245	280				
525	92	110	129	147	166	184	202	221	239	258	294				
550	96	116	135	154	173	193	212	231	251	270					
575	101	121	141	161	181	201	222	242	262	282					
600	105	126	147	168	189	210	231	252	273	294					
625	110	131	153	175	197	219	241	263	285						
650	114	137	159	182	205	228	251	273	296						
675	118	142	166	189	213	237	260	284							
700	123	147	172	196	221	245	270	294							
750	131	158	184	210	237	263	289								
800	140	168	196	224	252	280									
850	149	179	208	238	268	298									
900	158	189	221	252	284										
950	166	200	233	266	300										
1000	175	210	245	280											
1050	184	221	258	294											
1100	193	231	270												
1150	201	242	282												
1200	210	252	294												
1250	219	263													
1300	228	273													
1350	237	284													
1400	245	294													
1450	254														
1500	263														
1550	272														
1600	280														
1650	289														
1700	298														
1800															

For Use with [TRANSPREAD](#) Density Meter ..gb005, Standard Jockey. Accuracy of final settings operators responsibility based on use ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.



